



SMART VIDEO
PHONE USER
MANUAL

DW-710
DW-810

Safety Notices

- Please read the following safety notices before installing or using this phone. They are crucial for the safe and reliable operation of the device.
- Please use the external power supply that is included in the package. Other power supplies may cause damage to the phone, affect the behavior or induce noise.
- Before using the external power supply in the package, please check with home power voltage. Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it, it may cause fire or electric shock.
- The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not install the device in places where there is direct sunlight. Also do not put the device on carpets or cushions. It may cause fire or breakdown.
- Avoid exposure the phone to high temperature, below 0°C or high humidity. Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place.
- You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Contents

Introduction	
Smart Video Phone Denwa DW-810/710 Overview	5
With Attachment	5
Phone component descriptions	6
Interface introduction	8
Touch Screen Description	8
Status Bar	11
Functional applications	13
Update of the phone	15
Dssk	17
Contact	20
Add new local contact	21
Add account	21
Creat group	21
Favorite	21
Network Phonebook	22
BlockList&CallBarring	23
Phone Settings	24
System info	24
Network	25
Network	25
PPPoE	27
QoS	28
Port	29
Stun	31
Account	32
Call	35
General	35
Dial plan	39
Account	41
Display	43
Tone	43
Time&date	44
Maintain	44

Service port	44
CWMP set	46
Backup	47
Update	48
Audio	49
Audio	49
Audio param	50
Video	51
Video param	51
Bandwidth	52
Softkey	53
MCAST	54
Reboot	55
Call Service	55
Register	55
Outgoing & Incoming call	56
Video Call	57
Blind Transfer	58
Semi-attended Transfer	59
Attended Transfer	59
Conference Call	60
Call Hold	61
Android Settings	62
Ethernet configuration	62
Security	62
Language&Input	63
Web Settings	64
Logon	64
Network	65
QoS & VLAN	65
Service Port	68
Registration	70
Dial Plan	71
Basic Settings	71
Dial Plan Add	72
Security	74

Introduction

Thank you for purchasing the DW-710/810 Android smart video phone. The DW-710/810 is a fully featured video phone that provides voice and video communication over the data network. This phone has all the features of a traditional telephone and all gives access to many data service features. This guide will help you easily use the various features and services available on your phone.




Smart Video Phone Denwa DW-710 / DW-810 Overview



Denwa DW-710





Denwa DW-810







Key	Function
	Headset key. Click it enter the dial interface when the phone is in desktop, receive the call using headset mode or switch the call to headset mode during a call.
	Option key. You can browse and accomplish all functions of the phone through pressing this key. Also, you can press and hold this key to complete screenshot.
	The hands-free key.

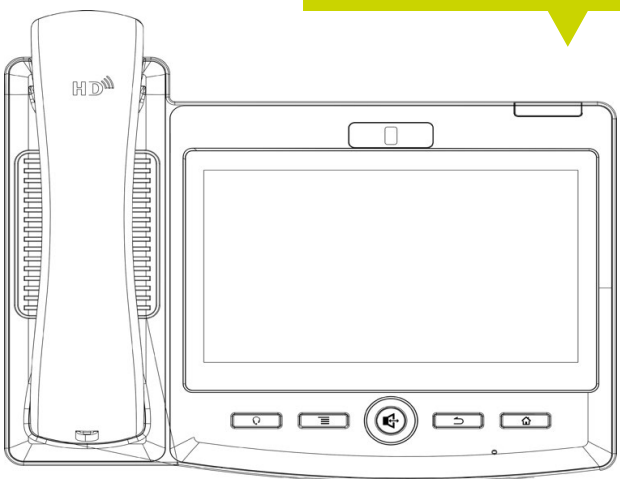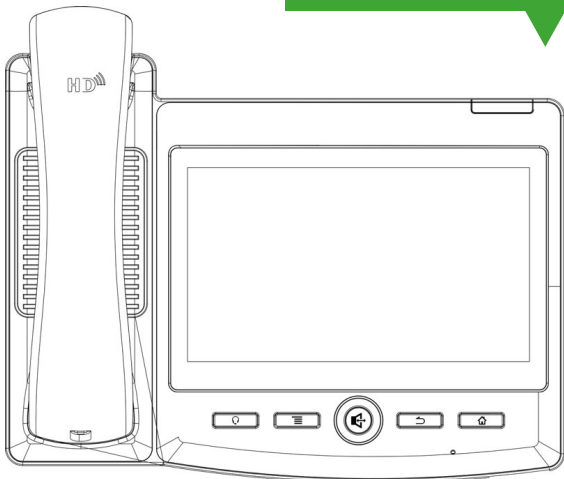DW-710 / DW-810 Phone component descriptions

Denwa DW-710


Denwa DW-810








Key	Function
	Headset key. Click it enter the dial interface when the phone is in desktop, receive the call using headset mode or switch the call to headset mode during a call.
	Option key. You can browse and accomplish all functions of the phone through pressing this key. Also, you can press and hold this key to complete screenshot.
	The hands-free key.
	Return key. Press this button in the detailed interface, it will return to the previous interface; If it is pressed in the application program interface, the current program will be closed.
	Home key. Press this key, the phone will return to the idle screen.
	The Camera

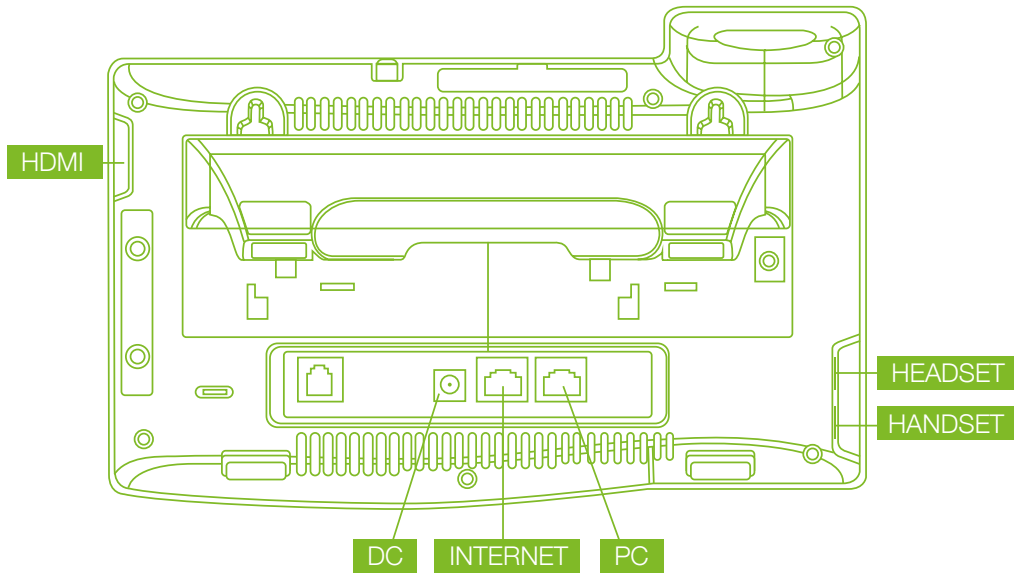


Only Denwa DW-810

DW-710 / DW-810 Phone component descriptions

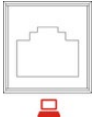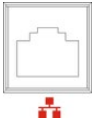

Key	Name	Meaning
	SD Card interface	Connect SD Card for saving data.
	DC Power Interface	Input: 220V AC Output: 12V DC
	PC interface	Specification RJ45, connect it computer.
	Internet interface	Specification RJ45, connect it to network.
	Handset interface	Specification RJ9, used to connect the Handset to the phone.

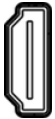

Key	Name	Meaning
	USB interface.	Connect it to USB disk.
	Headset interface.	Specification RJ9, used to connect the Headset to the phone.
	HDMI interface.	Interface for high-definition audio and video. A-A interface, A to A interface.

Note:

1. Put the handset line into the handset interface according to the interface illustration.
2. Plug the power adapter into the DC port; poke the other side of the power adapter into an electric socket.
3. Insert one end of RJ45 network cable into the phone's WAN port (Please refer to the

Interface

interface illustration picture 1) and put the other end into the network equipment. After that, if the network connection status on the status bar is displayed as, actions such as making some telephone calls and surfing the internet could be done. If the network connection status on the status bar is displayed as, please verify whether the network was configured correctly and the network cable was plugged in correctly.

Touch Screen Description

You can touch the screen manually to complete the corresponding operation. Here are three ways to use:



Click: Any icon or button can be clicked to realize its function.

Touch screen:

- Press and hold the standby interface will pop-up choice wallpaper desktop option box, you can according to the prompt to change the wallpaper.
- Support full multi-touch.

Slide:

Slide your finger on the screen upward or downward slowly to move the interface on the screen.

On some kinds of screen such as idle desktop, you can switch the desktop just by moving your fingers on the screen to left or right. Dragging your finger to slide will not select or activate anything on the screen.










You can just wait or gently press any place of the screen to stop the sliding after your finger rapidly sliding on the screen.

Gently pressing or touching to stop the scrolling will not select or activate anything on the screen.

Status Bar






All of the status information about DW-810/710 is displayed on the top of the screen. You can click on the notification icon in the left of the status bar or drag down the drop-down list with your fingers to enter the notification panel to further review and deal with all of the information.

Status Bar

Key	Name	Meaning
	Handset mode	Indicates that the phone is in the handset mode.
	Headset mode	Indicates that the phone is in the headset mode.
	Silent Mode	Shows that the phone is in silent mode. This mode can be canceled by directly clicking the mute button when the screen is in the idle interface.
	Hands-free mode	Indicates that the call is in hands-free status.
	Alarm clock	If you set an alarm clock, the alarm clock icon will display on the status bar.
	Network status (successful)	Displays that the network connection is successful. Tap the icon directly into the network settings.
	Network status (failed)	Shows that the network connected failed. You need to check the network is properly connected and the parameters are configured correctly.
	SD card	Displays that the phone successfully identifies the USB device. Tap the icon directly to switch into the USB application wizard.
	Missed calls	Shows that there are several missed calls. You can click on the icon directly to switch into the call log.

Note: The right icon of the status bar can't be drag, just the left can.

Phone elements icon





Key	Name	Meaning
	Open the DND	Shows that the phone is on “Do Not Disturb” mode. Any of the call could be directly rejected before it’s ring interface appears. There is only a missed call icon leaving in the status bar.
	Call forward	Indicates that the phone is in the headset mode.
	Auto answer	Shows that the phone is in silent mode. This mode can be canceled by directly clicking the mute button when the screen is in the idle interface.
	Black list	If a phone number is added to the firewall, then open the firewall function, all calls about this phone number could be rejected directly.
	New record	Indicates that there are several new unread phone recordings.

Note: The right icon of the status bar can't be drag, just the left can.

Functional applications:

Phone elements icon

Key	Meaning
 Phone	Click this icon, and it will switch to pre-dial interface. You can make some phone calls through the screen or keyboard.
 Email	Has the function of sending and receiving e-mail. When an account has been configured successfully, you can send and receive your e-mail on the phone and this account will automatically sync the contacts to the mailbox account.
 Settings	It contains System, Network, Account, Call, Display and so on. You can configure some settings.
 Contacts	Support functions such as search, add, remove and edit.
 Android Settings	It contains the Call settings, Basic settings, Advanced settings, VOIP and so on, you can configure some settings in the corresponding menu. (Android system settings)
 Message	Like the phone, with messages to write, read and send function.
 MWI	All calls will be transferred into voice mail when the MWI is enabled.

Key	Meaning
 Calendar	Enter into the calendar and you can view the accurate date.
 Call log	Enter the call log and you can view all call records. You can also view the “Incoming Calls”, “Outgoing Calls” and “Missed Calls” records by pressing the Option key.
 Import and Export Management	Have export contacts, add blacklists and outgoing call barring functions.
 PPPOE	Connect ppoe.



Update of the phone


Please contact with service provider to get the new version to upgrade.

Strongly recommended:

- 1 Before the upgrade the new version, please send personal data backup to mobile devices, to prevent accidental loss.
- 2 Once the upgrade process, please do not power blackout, equipment may not be able to start.

Auto provision: Keep phone registered successfully and configure parameters about automatic updates such as server address, upgrade file name, time interval and so on. And then the phone will check for updates from the server at a fixed time intervals and upgrade itself. See the specific automatically upgrade instructions, please switch to Update.

Manual upgrade - USB: Will upgrade   package in U disk and inserted the U disk into the USB interface (the content of the need to be updated). Before the phone restart, at the same time hold down the “” and “”, then insert the power supply and will enter the unit at this time to Recovery mode, you can see under the Recovery operation menu, shown below :

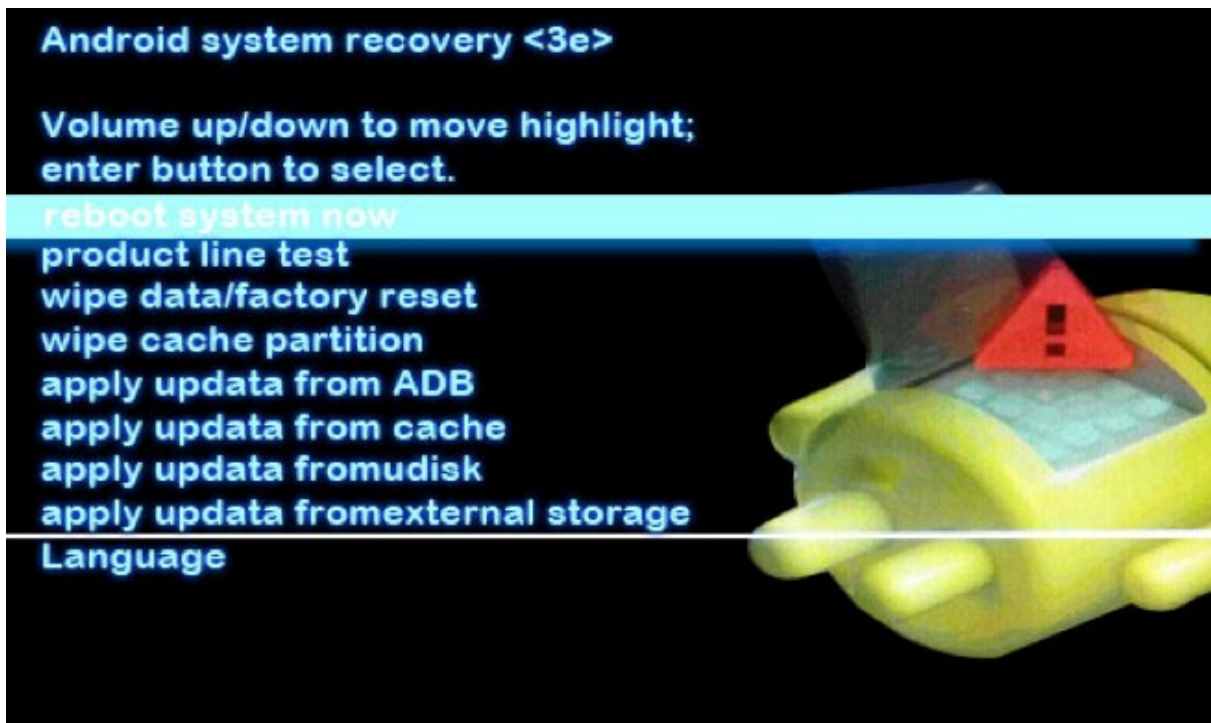



Through the hardkey “down”, “up”, “OK”, to operate on the Recovery menu.

Select “apply update from udisk” or “apply update from external storage” (SD card), enter the sub-directory and select the upgrade packages, click on “OK” key to start upgrade .After the success of the upgrade, there will be prompt on interface, the user can immediately return to the main menu select “reboot system now” to restart the system to start using the new version.

Notes: In some cases after upgrading, in order to avoid new and old version data of incompatible problems, needs to remove user data and system cache (the so-called double wiper) whether you need specific clear, please refer to the Release Note.

Web Update:

Input the phone’s IP on the web;

Input the user name and password to phone’s web;


Enter “MAINTENANCE” — “UPDATE”;

Click the button “Browser”to select the image on your PC and click the button “Update”;

Waiting, the system will be update success.

Desskey

Introduction: This module contains five expansion module, 140 editable key. You can click “edit” or press and hold the key to edit it. Line1~6 and release are the default keys, but you can also edit them. Like the below picture:

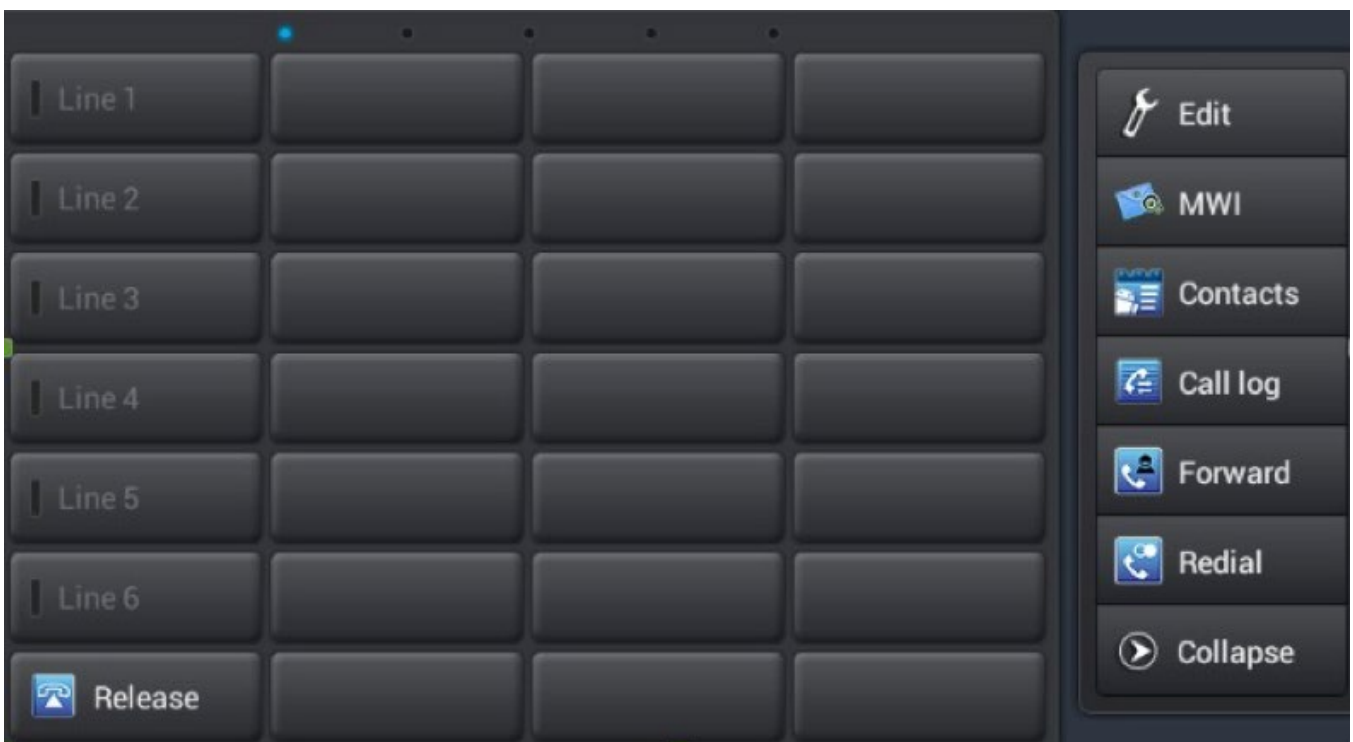

Type	Meaning
Memory Key	<p>Clicking on the button you can dial the mapped number directly.</p> <p>Subscribe : BLF , Presence ,Speed Dial and Intercom Pickup number :the number which server set.</p> <p>Pickup :That is, when A calls B, B ringing but no one answered the call, C could dial a number which is comprised of specified prefix and B’s number, and then C can talk with A.</p> <p>BLF: It used to prompt you the state of the subscribe user, and that could pick up the subscribed number by the state. BLF help you monitor the state of subscribe user (idle, ringing, a call).</p> <p>Presence: Compared to BLF, the Presence is also able to view whether the user is online. Note: You cannot subscribe the same number for BLF and Presence at the same time</p> <p>Speed dial :You can call the number directly which you set. This feature is convenient for you to dial the number which you frequently dialed.</p> <p>Intercom: This feature allows the operator or the secretary to connect the phone quickly; it is widely used in office environments.</p>

Led Status	Led Status
Line	The button map the sip line, it enter the dial pad and light the default sip line when you click the button.
Key Event	The button map some Key Event. Title: Consistent with the subscription name Subtype: Some basic keys
DTMF	It maps the keypad of the phone, allowing you to edit the dialed number or input numbers during a call.
URL	It maps the website; click it to open the URL directly.
Multicast	It maps the Multicast; you can click it to make a multicast.

The LED status of BLF

Led Status	Description
Steady green	The object is idle.
Slow blinking red	The object is ringing.
Steady red	The object is active.
Fast blinking red	The object has failed.
Steady orange	The subscribed number is in a call with current line.
Off	Not subscribed.

The LED status of Presence

Led Status	Description
Steady green	The object is online.
Slow blinking red	The object is ringing.
Steady red	The object is active.
Fast blinking red	The object has failed.



Note: Please set Type first, then set subtype and value base on the introduction.

 
You can select value from contacts by clicking the contact icon. Save the configuration and click complete in right side.


You can delete the dsskey by the same method, edit->clear->save->complete.

Contact

Introduction: This module contains five expansion module, 140 editable key. You can click “edit” or press and hold the key to edit it. Line1~6 and release are the default keys, but you can also edit them. Like the below picture:

Add new local contact

1. Tap the contacts button.
2. Tap “+” in the upper-right corner.
3. Select “Keep Locally”.
4. Add a picture for a contact. Tap into  the picture selection interface to select photos in your list of photos when editing contacts. It will automatically return to the editing interface after you save it. If you want to change the picture, tap the Contacts icon to select “use this photo”, “delete the icon” or “change the icon”.
5. You can click the little arrow to expand the name what you want to edit.
6. Follow the prompts to complete the edit contacts, you can also select save to Dsskey. Click “Done” to save it.

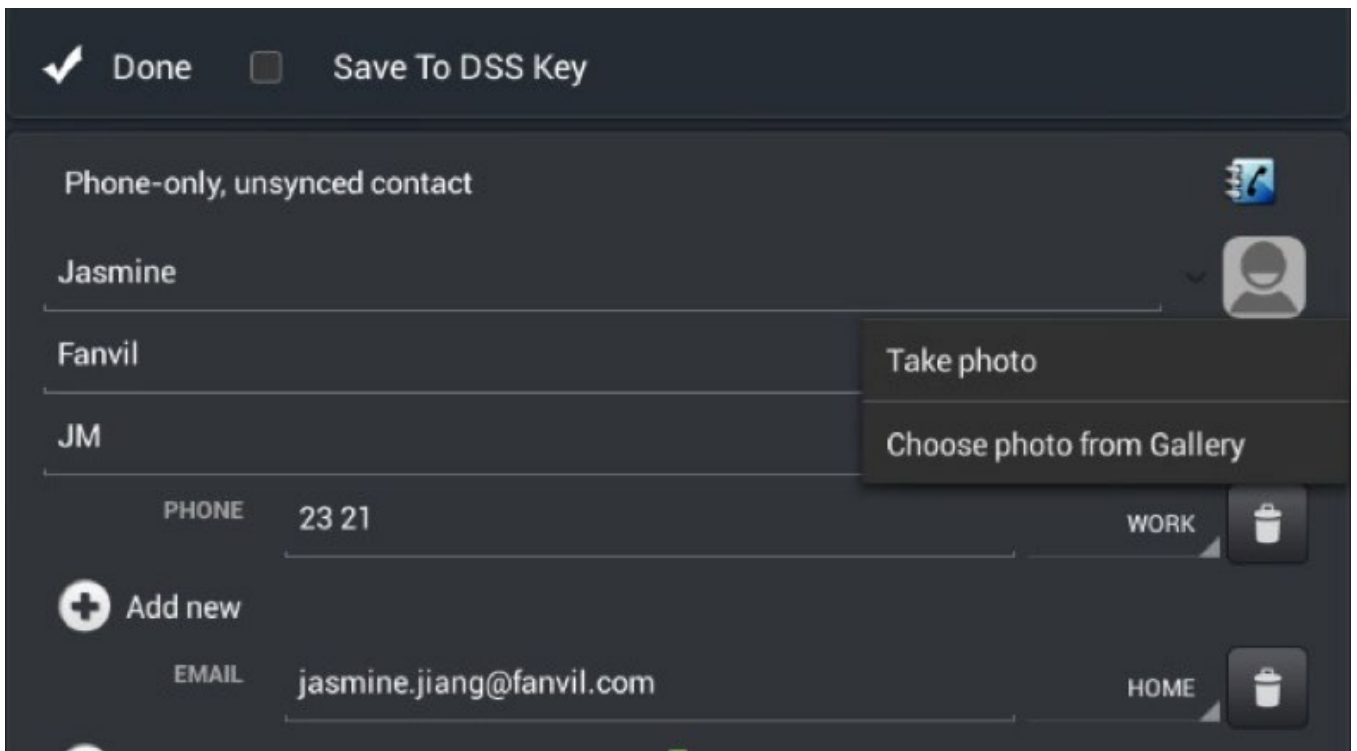


Add account


1. Tap the contact button;
2. Tap “+” in the upper-right corner.
3. Select “Add account”.
4. Edit exchange account and follow the prompts to complete the editing.

Create group

1. Tap the “Group” button;
2. Click “+” in the upper-right corner;
3. You can select “Create local group” or “Create account group”;
4. Edit group name, then pick members from contact list;
5. Click “Done” to save the group.

Favorite


1. Tap the “Favorite” button;

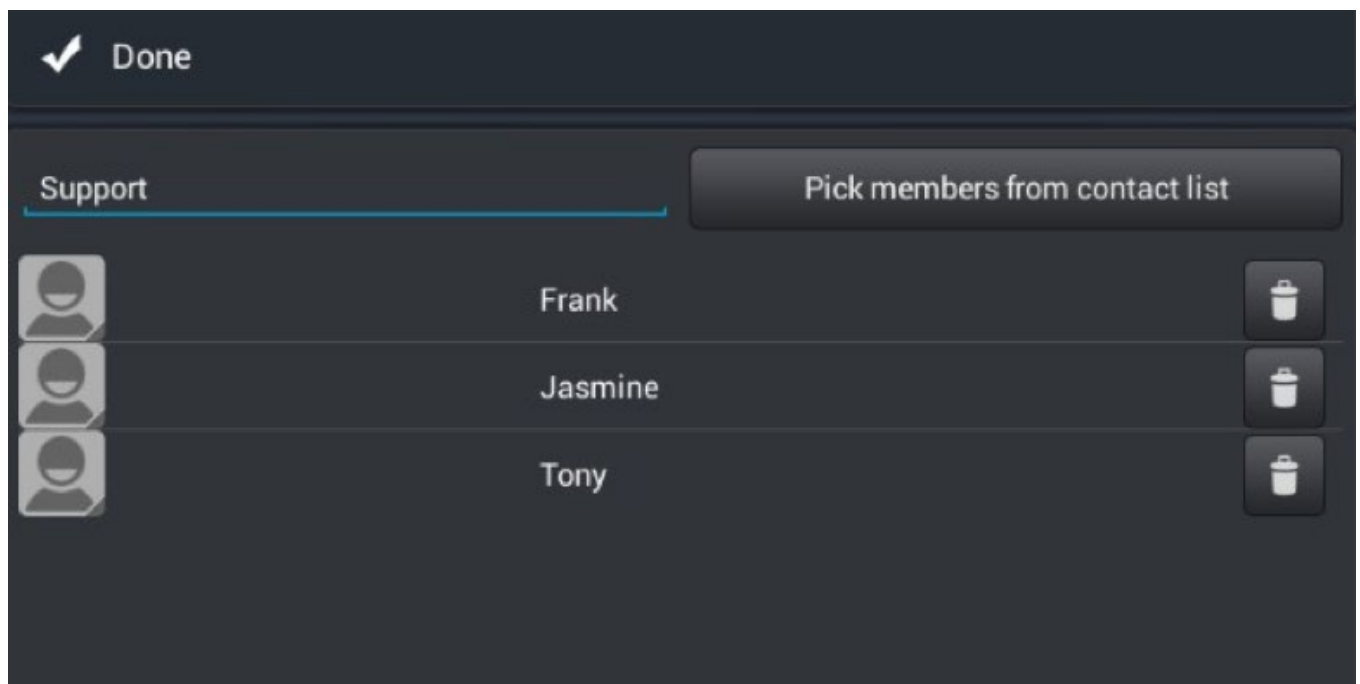2. Select the contacts what you want to set, or click to select all the contacts.
3. Click confirm to save them.



Network Phonebook

Set the remote phonebook

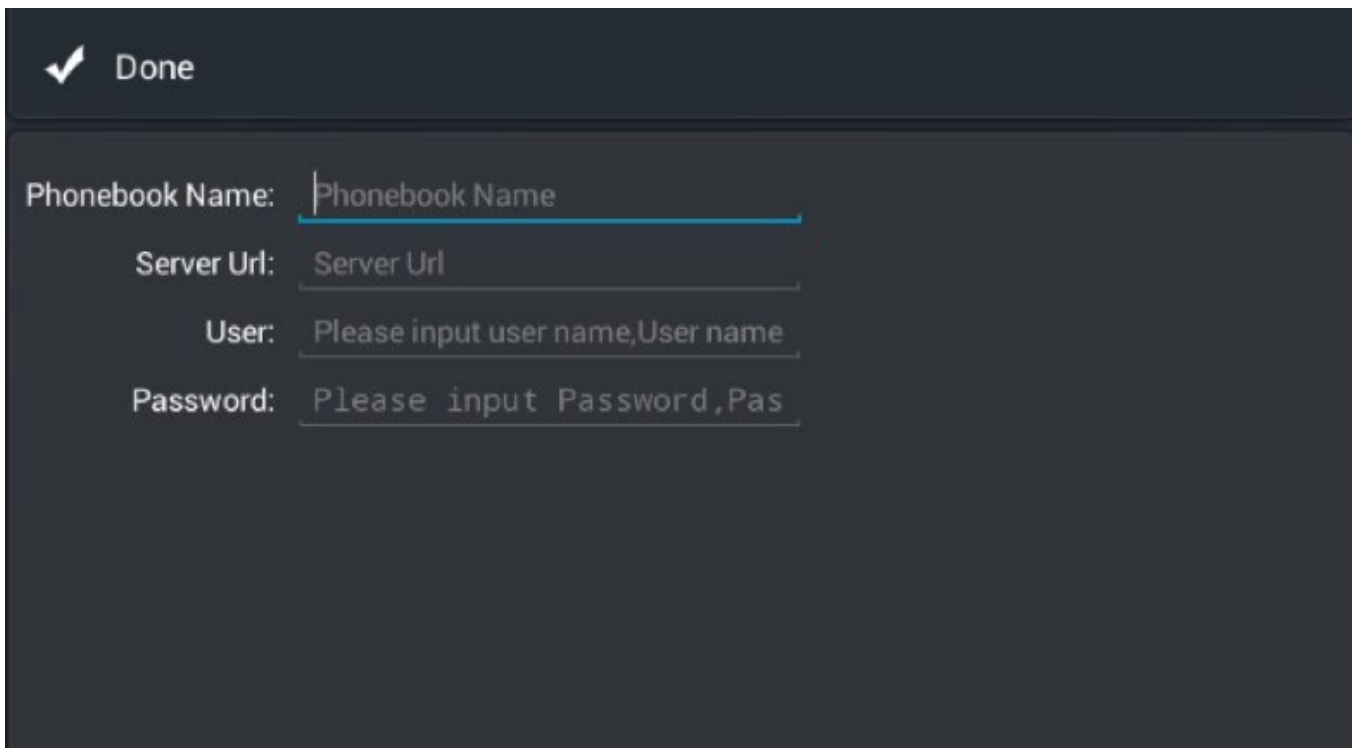1. Click the edit icon in the upper-right;
2. Click URL;
3. Follow the prompts to fill in the information.
4. Click “Done” to save it.



✓ Done

Phonebook Name:

Server Url:

User:

Password:

Set the LDAP

1. Click the edit icon in the upper-right;
2. Click LDAP;
3. Edit the information following the prompts;
4. Click “Done” to save it.

BlockList&CallBarring

You can enable Blacklist, click the “+” to add number or contacts what you want. Using the same method to set the whitelist and CallBarring.

Phone Settings

System info


Tapping “Settings” can directly enter the default window “System info”. It displays the current system information state.

Configuration item	Meaning
PPPoED	Displays the connection status of the PPPoE, there are three display states : Disabled, Connecting and the IP address.
Connect mode	Displays the selected network mode, DHCP or Static IP.
IP address	Displays the IP address of the current network model.
Subnet mask	Displays the Subnet Mask of the current network model.
IP Gateway	Displays the default gateway of the current network model.
Primary DNS	Displays the primary DNS server address of the current network model.
Secondary DNS	Displays the standby DNS server address of the current use of the network model.
MAC address	Displays the current MAC address.
Version	Displays the current version of the phone.
Phone mode	Displays the current phone model.
Account	Displays the current configuration of the Accounts and more detailed information will be displayed on the desktop widget.


Network

Network

Tap "Network"----> "WAN mode" interface, the default interface is "DHCP": click "Save" button to save successfully after the configuration of each interface is finished. Then a tip box "Config saved" will be shown.

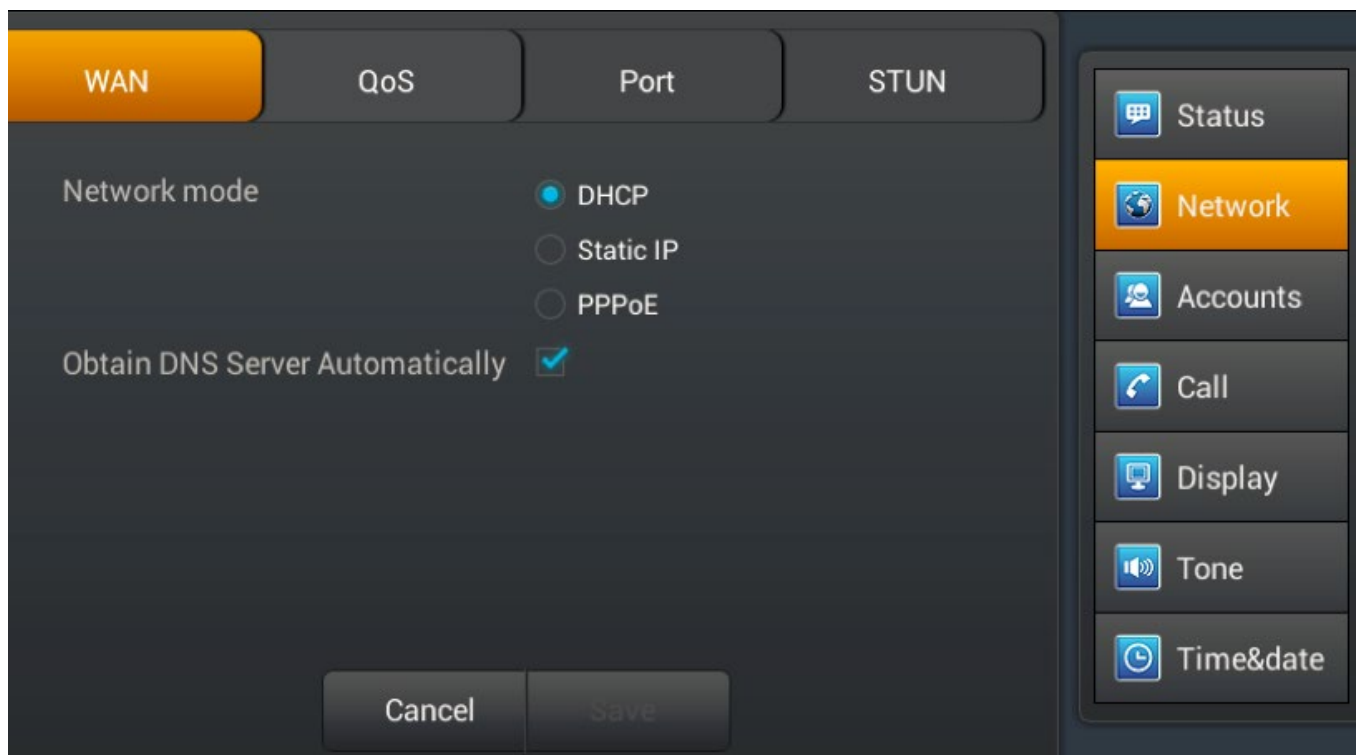

DHCP interface

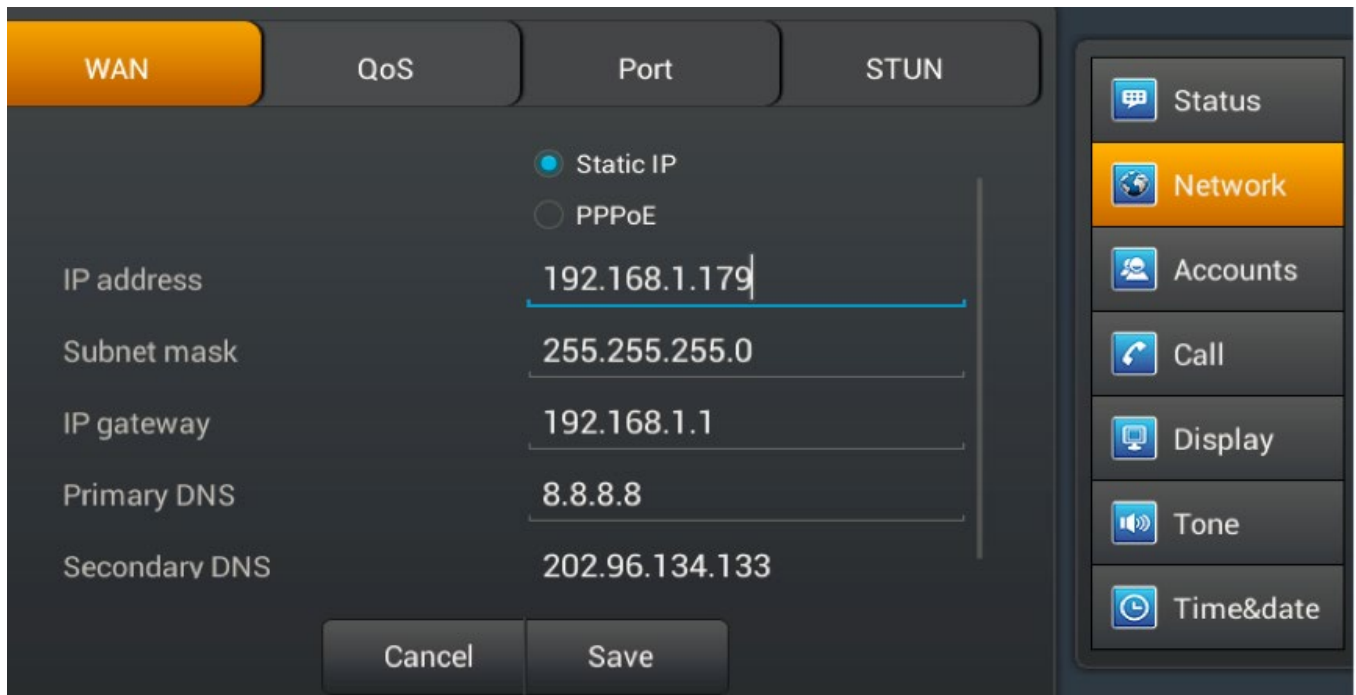

The screenshot shows the WAN configuration page with the following settings:


- WAN** (selected tab)
- QoS** (tab)
- Port** (tab)
- STUN** (tab)
- Static IP** (selected radio button)
- PPPoE** (radio button)
- IP address:** 192.168.1.179
- Subnet mask:** 255.255.255.0
- IP gateway:** 192.168.1.1
- Primary DNS:** 8.8.8.8
- Secondary DNS:** 202.96.134.133
- Buttons:** Cancel, Save
- Right sidebar menu:** Status, Network (selected), Accounts, Call, Display, Tone, Time&date

Static IP interface

Configuration item	Meaning
DHCP	You can select to use DHCP, which means whether Use the DNS to connect network assigned by the DHCP server.
Static IP	IP address: Input your assigned IP address. Subnet mask: Input your assigned subnet mask. IP gateway: Input your assigned gateway. Primary DNS: Input your assigned DNS server address. Secondary DNS: Input your assigned A lert DNS s erver address.

PPPoE

Tap “Network” ----> “PPPoE”. After configuring the parameters, you can click “Save” button to save.

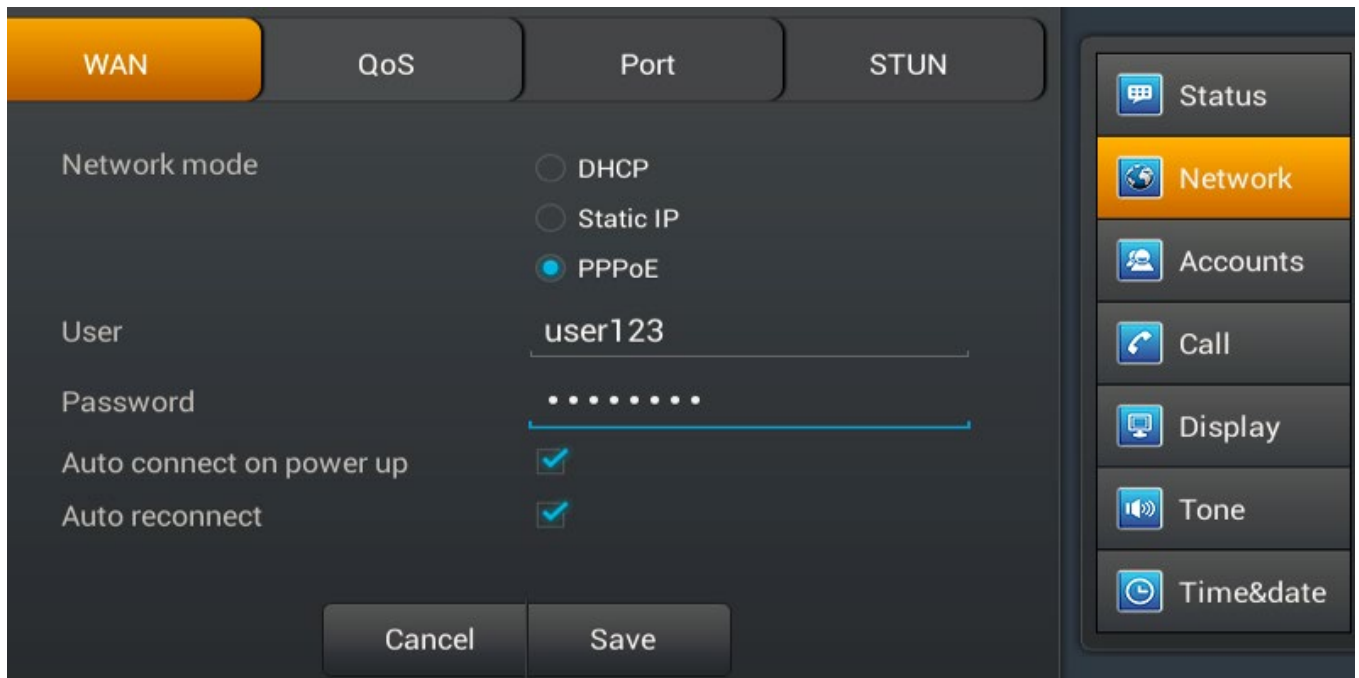


PPPoE interface

Configuration item	Meaning
PPPoE	<p>User: Input your assigned PPPoE Username.</p> <p>Password: Input your assigned PPPoE Password.</p> <p>Auto connect on power up: Whether to automatically connect PPPoE on power up.</p> <p>Auto reconnect: When connecting failed whether to automatically connect PPPoE.</p>

QoS

Tap “Network”----> “QoS”, after selecting or modifying the default settings click the “Save” button to save

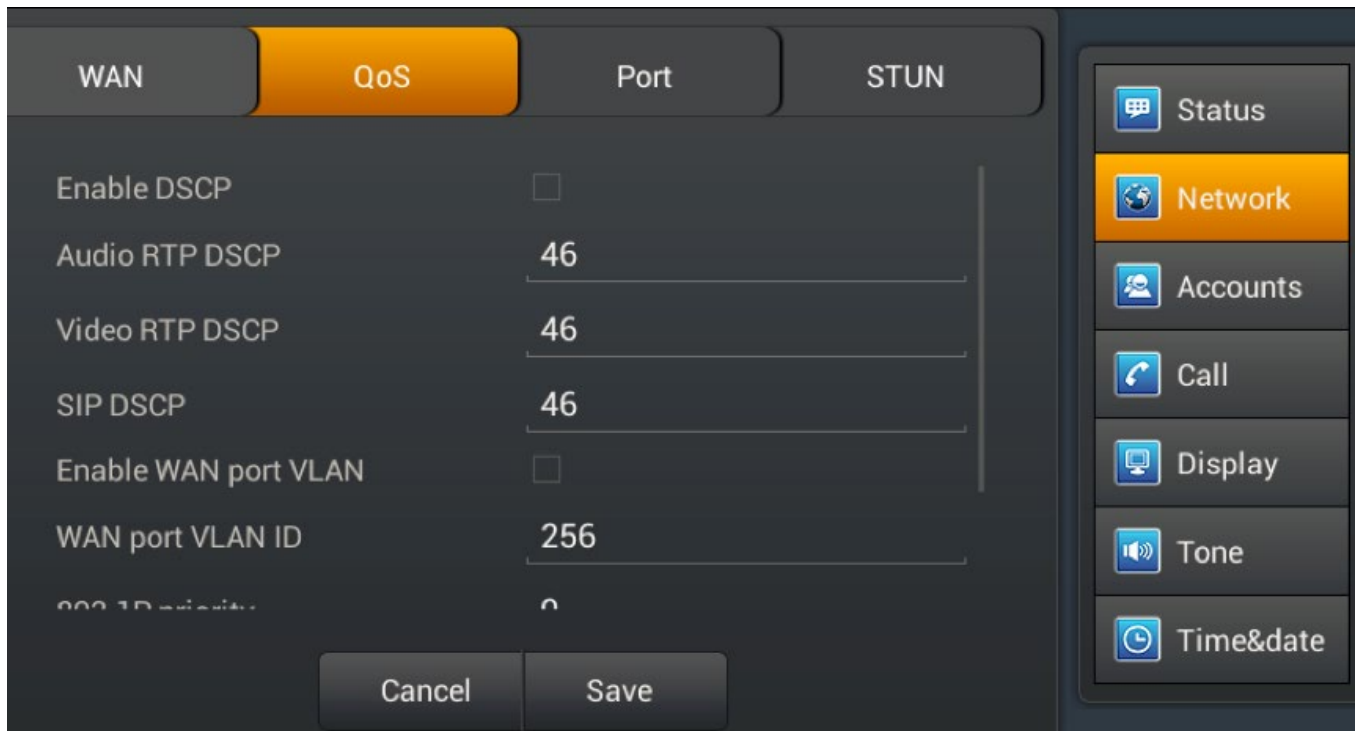

QoS-DSCP Settings

DSCP is one standard of QoS. It can set the priority of Voice, Video and Signal.

Configuration item	Meaning
QoS- DSCP	<p>Enable DSCP: Enable/Disable DSCP.</p> <p>Voice DSCP: Set the number of Voice DSCP.</p> <p>Video DSCP: Set the number of Video DSCP.</p> <p>Signal DSCP: Set the number of Signal DSCP.</p>

Slide down the screen to the QoS-WAN VLAN page.

VLAN is Virtual Local Area Network.

Enable VLAN, then you can set VLAN ID, the range of ID number is 0~4095; you can also set the priority of 802.1p, the range is 0~7.

Note: You must enable DSCP if you want to set 802.1P priority.

Configuration item	Meaning
QoS- WAN VLAN	<p>Enable WAN port VLAN: Enable/Disable WAN port VLAN.</p> <p>WAN port VLAN ID: Set the number of VLAN ID.</p> <p>SIP 802.1P priority: Set the priority number of SIP 802.1p priority.</p>


Slide down the screen to QoS-Port VLAN interface

Port VLAN is based on port VLAN, in the same VLAN port to communicate with each other.

Configuration item	Meaning
QoS- Port VLAN	<p>Port VLAN mode: Select the status of LAN Port VLAN.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Follow WAN: Follow the ID number of WAN. <input type="checkbox"/> Disable: Disable Port VLAN. <input type="checkbox"/> Enable: Enable Port VLAN and you can set the LAN Port VLAN ID different from WAN. <p>LAN port VLAN ID: Set the number of LAN Port VLAN ID.</p>

Port


Tap “Network” ----> “Port”, after selecting or modifying the default settings click “Save”

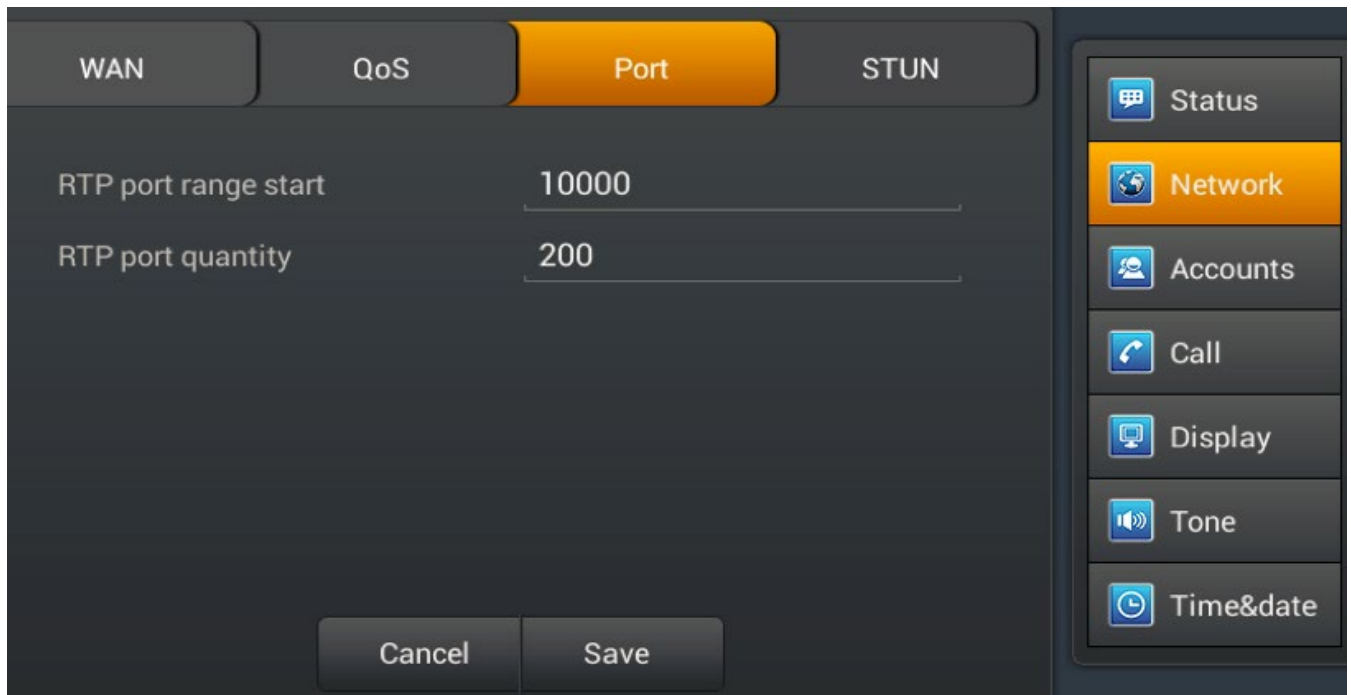

Configuration item	Meaning
Port	<p>RTP port range start(10000-60000): Set the telephone's RTP start port. This port is distributed to dynamic allocation.</p> <p>RTP port quantity: Set the maximum number of allocated RTP port. The default is 200.</p>

Stun

Tap "Network" ----> "Stun", after selecting or modifying the default settings click "Save"

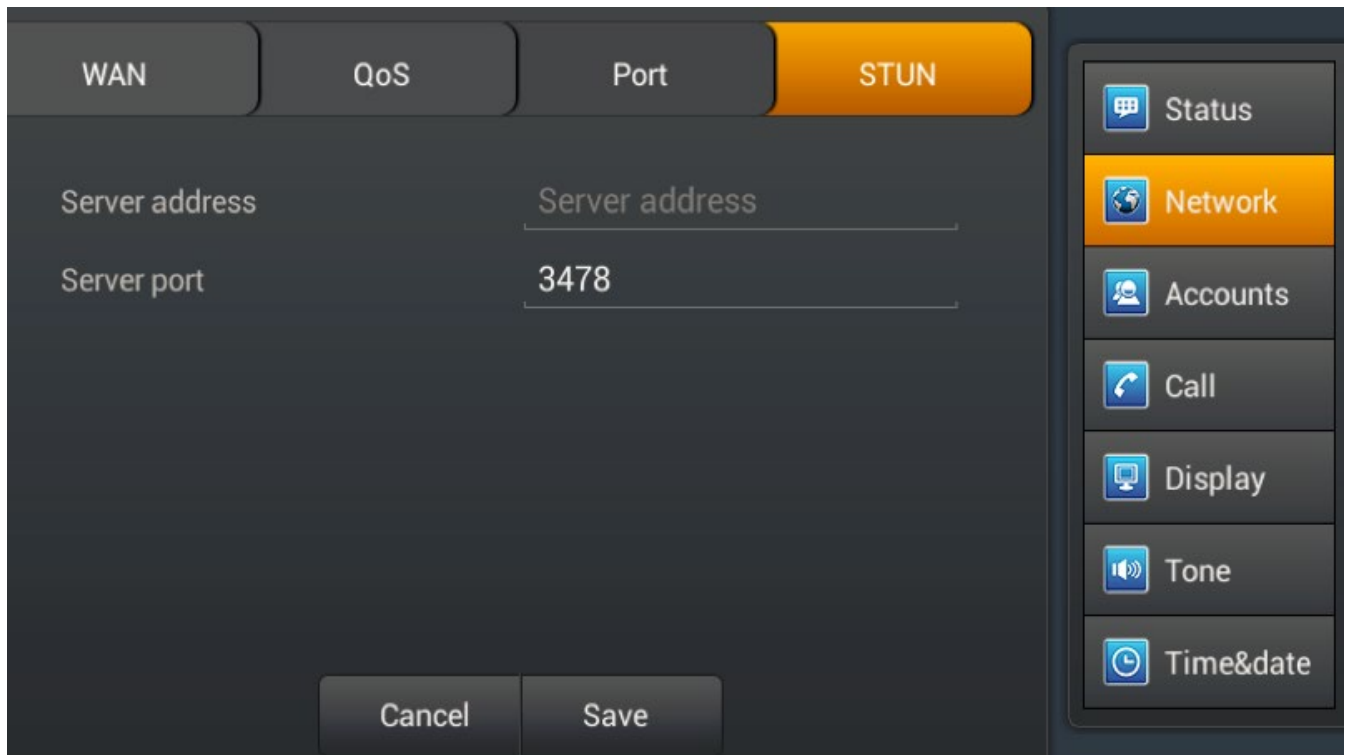


STUN interface

Configuration item	Meaning
STUN	Server address: Configure the SIP STUN server address. Server port: C onfigure the SIP STUN server port .The default is 3478.


Account


Tap “Accounts”---->”Account1”, the default password is 123456, you can slide down to set more parameters follow the prompts , after all the parameters are set, you can click “Save” button to save.

(Note: The Account1, 2, 3, 4 ,5,6 has the same settings.)

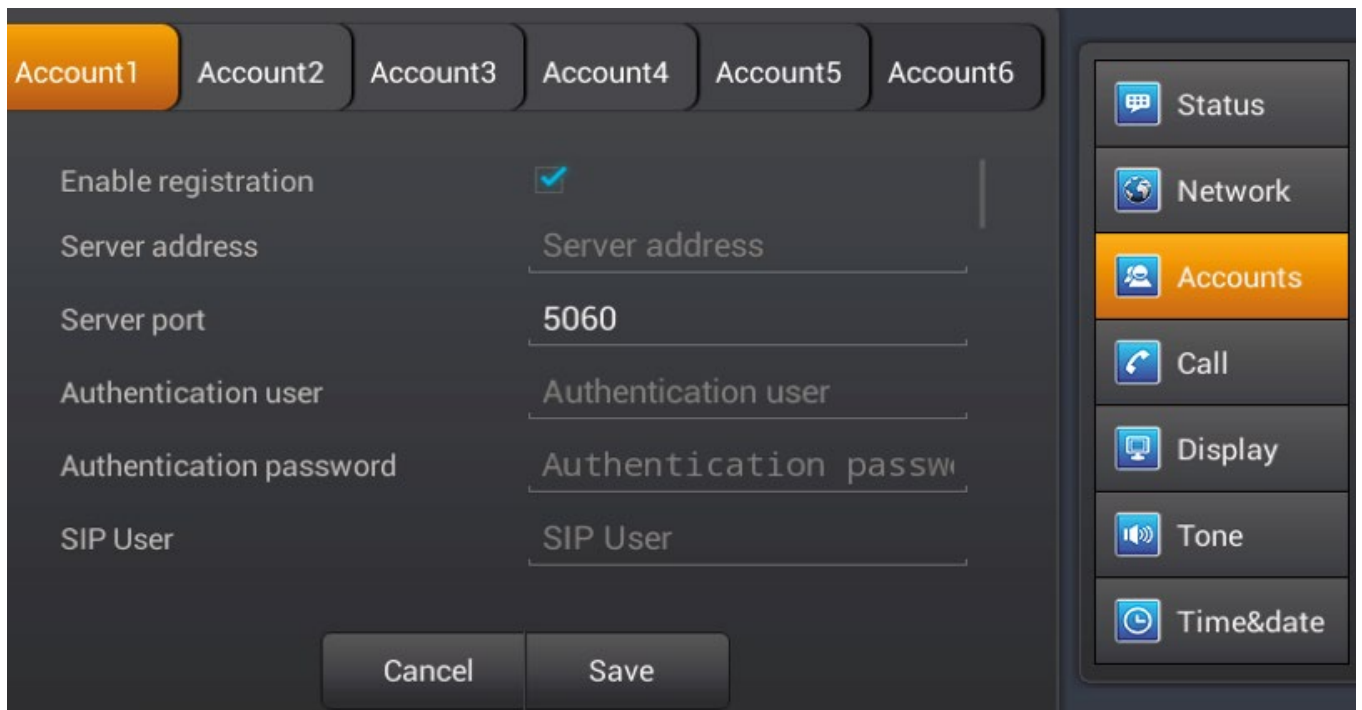

Account

Configuration item	Meaning
Account	<p>Enable registration: Enable/Disable registration.</p> <p> Disable register, Enable register.</p> <p>Server address: Set your SIP server address. It supports the address in the form of domain name.</p> <p>Authentication user: Set your SIP account.</p> <p>Authentication Password: Set your SIP password.</p> <p>SIP user: Input the phone number assigned by your VoIP service provider. Phone will not register if there is no phone number configured.</p>

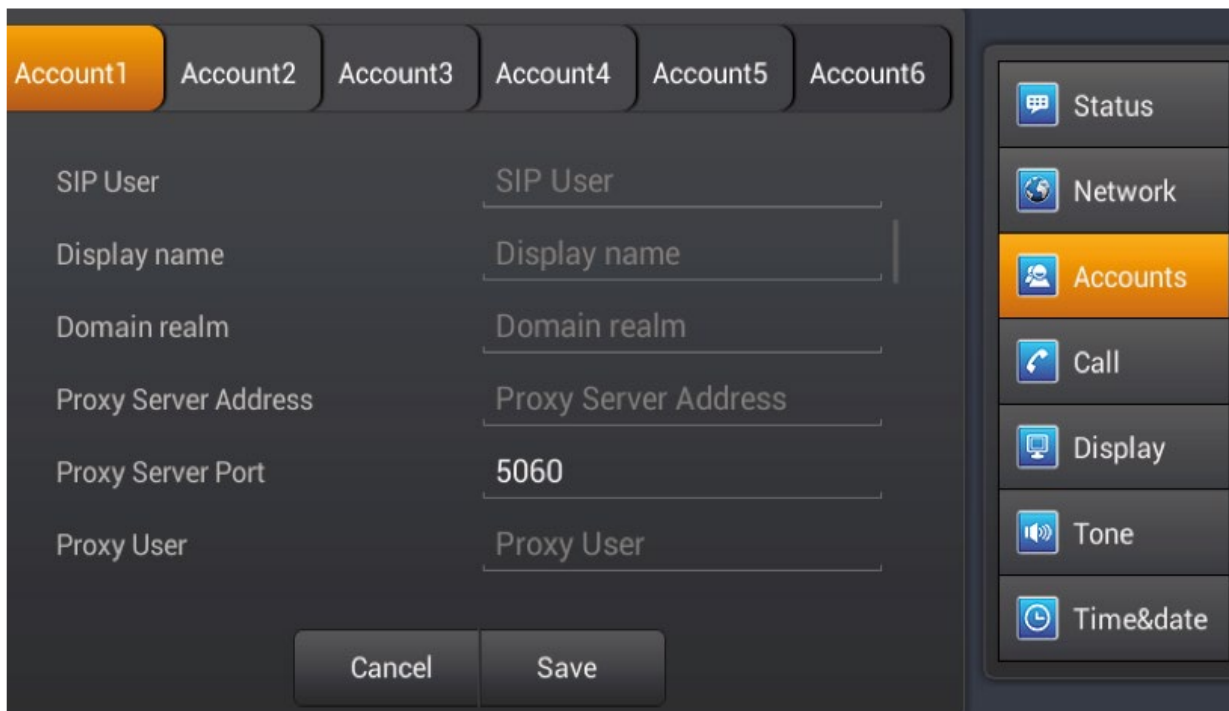

Account

Display name: Configure the display name, it allows the English alphabet input (does not support Chinese).

Domain realm: Configure the SIP domain name (You do not need to configure it because the system will configure automatically).

Proxy Server Address: Configure the proxy server address.

Proxy Server Port: Configure the proxy server address.

Backup Proxy Server Address: Configure a backup server address. When the primary server is not connected, you can use the backup server for calling communications (The backup server can be connected only when the primary server cannot connect); When the primary server is connected, the phone will automatically switch back to the primary server to communicate.

Backup server port: Configure the backup server port.

Backup Proxy Server port: Configure the SIP register proxy server port.

Server name: Configure the SIP register server name.

Registration expire(s): Configure the server registration expire(s), default is 60 seconds. If the registration time of the server required is greater or less than the time of the phone to configure, telephone can automatically modify to the time limit that server recommended, and register again.

DTMF Type: Set DTMF mode, there are four types:

In-band

RFC2833

SIP_INFO

Account

AUTO

Different server vendors can provide different models.

RFC protocol edition: Configure the protocol version of the phone. When your phone needs to communicate with gateway which uses SIP1.0, such as CISCO5300, you need to configure to RFC2543 to conduct normal communication. RFC3261 is used by default.

Anonymous call edition: Configure whether to use anonymous security call. It supports RFC3323 and RFC3325.

Transport protocol: Configure the transport protocol, TCP, UDP or TLS.

Ban anonymous call: Configure whether to ban anonymous call.

Enable strict proxy: Compatible with special server. (Using source address of opposite side when return message, no longer use the address in via field).

Subscribe for MWI: After successful registration, you can subscribe to information, such as someone else's status or voice mail and so on.

Enable rport: Configure whether to support RFC3581, rport mechanism is used in internal network, and requires a SIP server to support, it is used for keeping the NAT connect of the internal network and the external network.

Enable PRACK: Configure whether to support SIP-PRACK function (used by "Color Ring Back Tone") Recommend: Use the default configuration.

Convert URI: When you send URI it will convert # to %23.

Enable DNS SRV: Configure whether to enable RFC2782 protocol edition.

Enable displayname quote: Set to make quotation mark to display name as the phone sends out signal, in order to be compatible with server.

Use Stun: Enable/Disable SIP STUN.

Enable BLF List: Enable/Disable BLF List.

BLF list number: Input the number of BLF List.

Enable session timer: Enable/Disable session timeout.


Session timeout(s): Set the time of session timeout.

Call

Tap "Call" enter the interface, after configuring the parameters of each interface, you can click "Save" button to save.

General

Tap "Call" -->"General" interface, after configuring the parameters, you can click "Save" button to save.

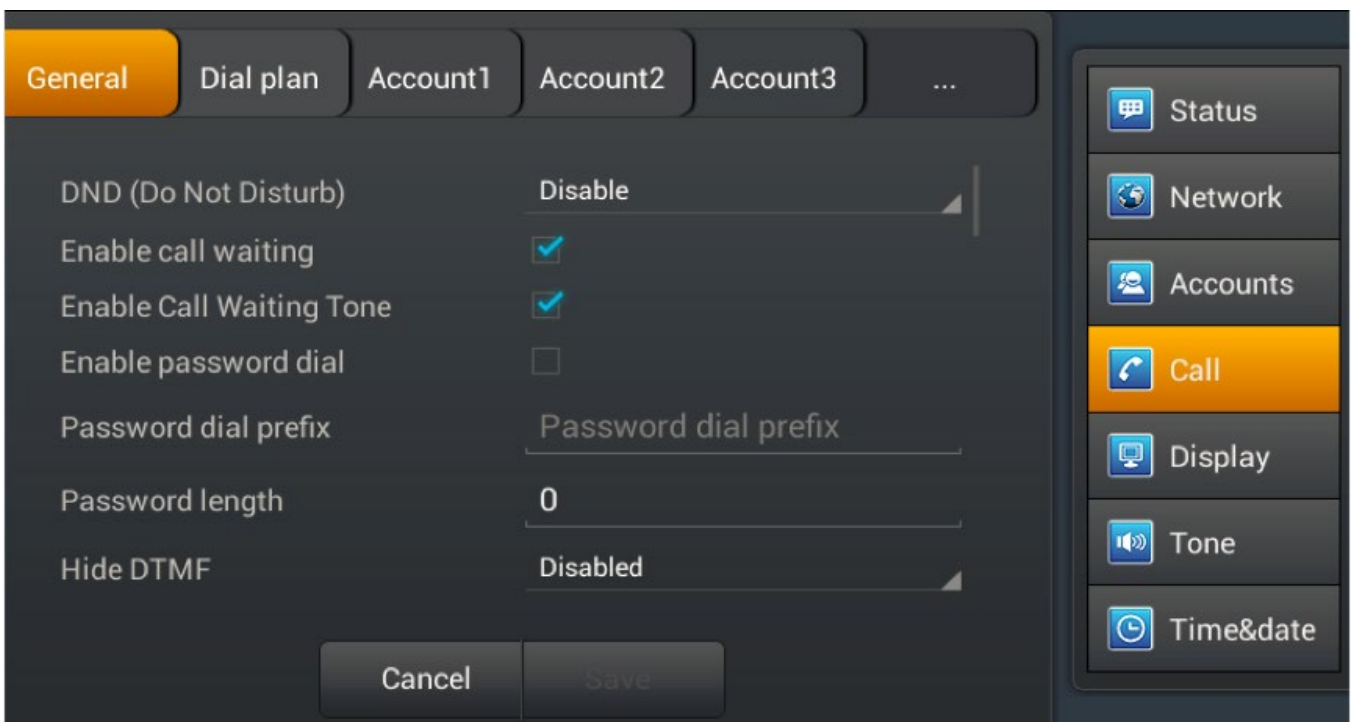

General interface


Configuration item	Meaning
General	<p>Do not disturb: It will not allow any phone call while enable the function, but there will have prompt in the missed calls.</p> <p>Enable call waiting: Whether enable call waiting.</p> <p>Call waiting tone: If enable the function, there will have call waiting tone if there has a call waiting.</p> <p>Enable password dial: Whether enable the password dial.</p> <p>Password dial prefix: Set the prefix of the number.</p> <p>Password length: After setting the length successfully, the number dialed out will hide the appropriate length. For example, sets the prefix number to 138, the password length is 5, and dial the number 138142658941, then it will display as 138*****8941 on the dial interface.</p> <p>Hide DTMF: It has four choices: Disable, All, Delay and Last show.</p> <p>Disable that is the content you input is clear text and it can be seen.</p> <p>All that is the content you input is hidden immediately and displayed as *.</p> <p>Delay that is the content you input will display in clear text first and then displayed as *.</p> <p>Last show that is the last one inputted will displayed in clear text and the others will displayed as *.</p>

Configuration item	Meaning
	<p>Ban outgoing: Forbid call out.</p> <p>Enable call transfer: Enable /disable the function, if disable the function, the phone can not do transfer .</p> <p>Semi-attended transfer: During the talk, press Transfer firstly, and then press Send after inputting the number that you want to transfer to. You are waiting for connection, now, press Transfer and the transfer will be done. (To use this feature, you need enable call waiting and call transfer first).</p> <p>Enable Auto on Hook: Enable this function, and set the auto on hook time, the phone will auto return to previous interface after the time when end a call.</p> <p>Enable 3-way Conference: You can make a conference when enable this function.</p> <p>Enable call completion: Enable Call Completion by selecting it, If the callee is busy, the sip server will inspect the callee status at intervals. If the callee is idle, the server will send notify message to inform the caller whether redial.</p> <p>Enable auto redial: Enable this function, calling out someone, if he is in busy, it will pop up a prompt box whether to auto redial, press OK, the phone will call out him according the Interval and Times that you set.</p> <p>Auto redial interval: Specify the Auto Redial interval.</p> <p>Auto redial times: Specify the Auto Redial times.</p> <p>Enable intercom: Enable Intercom Mode by selecting it. Then you can set up connection to the operator or the secretary quickly, and it widely used in office environments.</p> <p>Enable intercom mute: Enable mute mode during the intercom call.</p> <p>Enable intercom tone: If the incoming call is intercom call, the phone plays the intercom tone.</p> <p>Enable intercom barge: Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call.</p> <p>Update dial call: Enable this function, the phone will update the peer display name based on the 200OK packet.</p> <p>Ring from headset: Enable Ring From Handset by selecting it, the phone plays ring tone from handset.</p> <p>Enable Hide Local Area Code: Enable /disable the function, if enable the function it will hide the local number.</p>

Configuration item	Meaning
	<p>Auto Hold:when you call or receive the second way calls, the phone will hold the first way call.</p> <p>Country code:Input the country number, such as the number of China is 86.</p> <p>Area code:input the region number, that is the area number ,for example ,the number of Beijing is 10.</p> <p>Call Waiting Code:You can choose the Call waiting response, 180 or 182.</p> <p>Default Ext Line:You can select any sip to be the default line, the number will display in the upper-left.</p> <p>Default Dial Mode:Choose the default mode when you call other.</p> <p>Default Ans Mode:Choose the mode how you receive the call.</p>
	<p>Accept video mode:You can choose <input type="radio"/> Manual accept video, <input type="radio"/> Auto accept video or <input type="radio"/> Auto reject video.</p> <p>Enable Record:You can record the conversation when enable this function.</p> <p>Use SIP numbering plan:Enable this function, you can register the sip number with letters and characters.</p> <p>Configure Emergency Number: You can configure one or more number here, and call them even if the screen lock.</p> <p>Enable 3rd IM App:Enable this function, you can install the third instant messaging app.</p> <p>IM App:If you select the third app, when you pick up handset or press Headset/Handsfree key, the phone will use the app to make a call.</p>

Dial plan

Tap “Call”----> “Dial plan” interface. After configuring the parameters, you can click

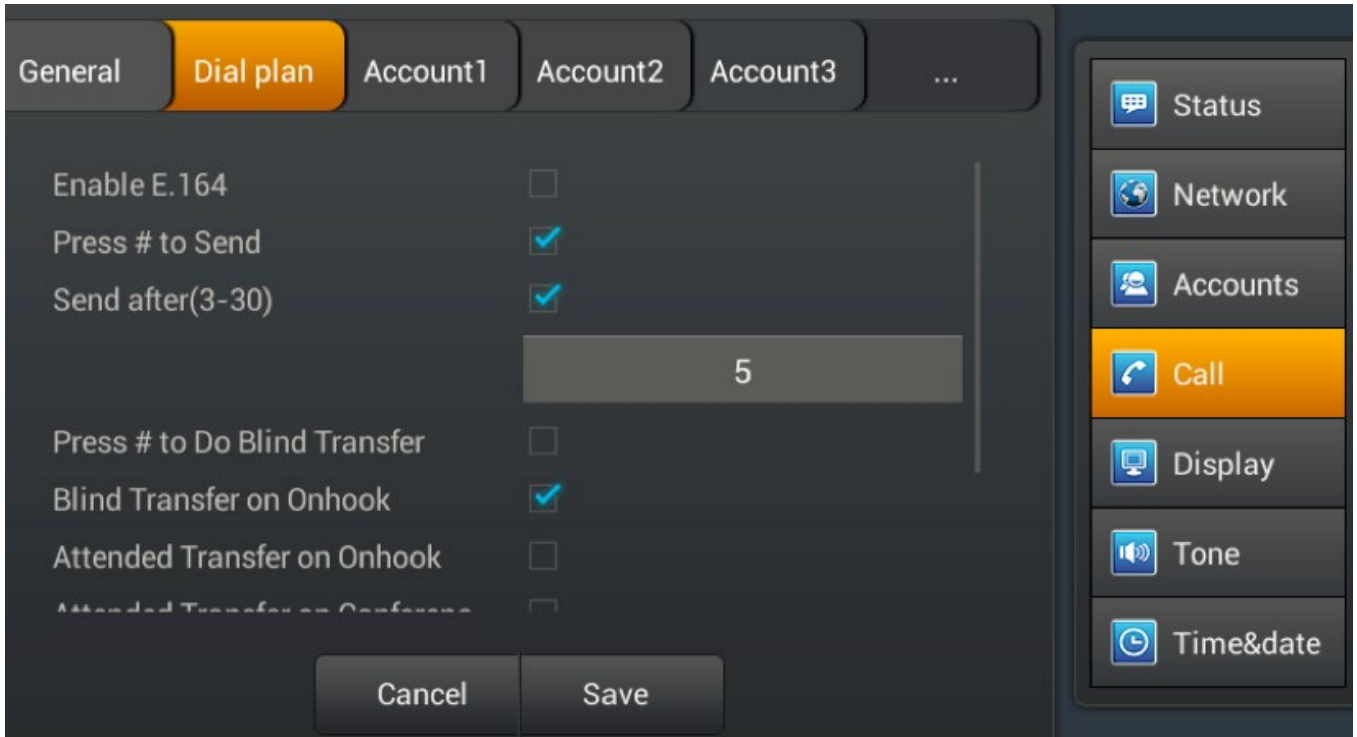


Tap “Call”----> “Dial plan” interface. After configuring the parameters, you can click

Configuration item	Meaning
Dial plan	<p>Use E164: Enable/Disable E164. After it is enabled, it will directly dial numbers according with E164 rules.</p> <p>Press # to Send: Enable/Disable. After enabling the function, input the number end with "#" in the non-pre-dial mode, it will directly dial the phone number.</p> <p>Press # to Do Blind Transfer:Enable/Disable. After enable this function, when you do a blind transfer, you can input number end with "# do send it.</p> <p>Blind Transfer on Onhook:Enable/Disable. After enable this function, when you end input the transfer number, you can directly on hook the phone to do the blind transfer.</p> <p>Attended Transfer on Onhook:Same as above, but do the attended transfer.</p> <p>Attended Transfer on Conference:Enable this function, when you host a 3-way conference, you can on hook to do the attended transfer.</p> <p>Dial prefix: Enable/Disable. After enabled the function, it will be automatically added the outside line prefix number before the outgoing number when you are going to call.</p>

Configuration item	Meaning
Dial plan	<p>Method to use the prefix: Example</p> <p>If you set the prefix is 135856, and you want to dial the number 13585679801. Then when you dial the number, you can press and hold 0, when the 0+0 appears you can just input 79801 and send the number, the 0+79801 is the numb you input, but you can see the dialing number is 13585679801.</p>

Account 1

Tap “Call” —>”Account1\2\3\4\5\6” interface, after configuring the parameters, you can click “Save” button to save.

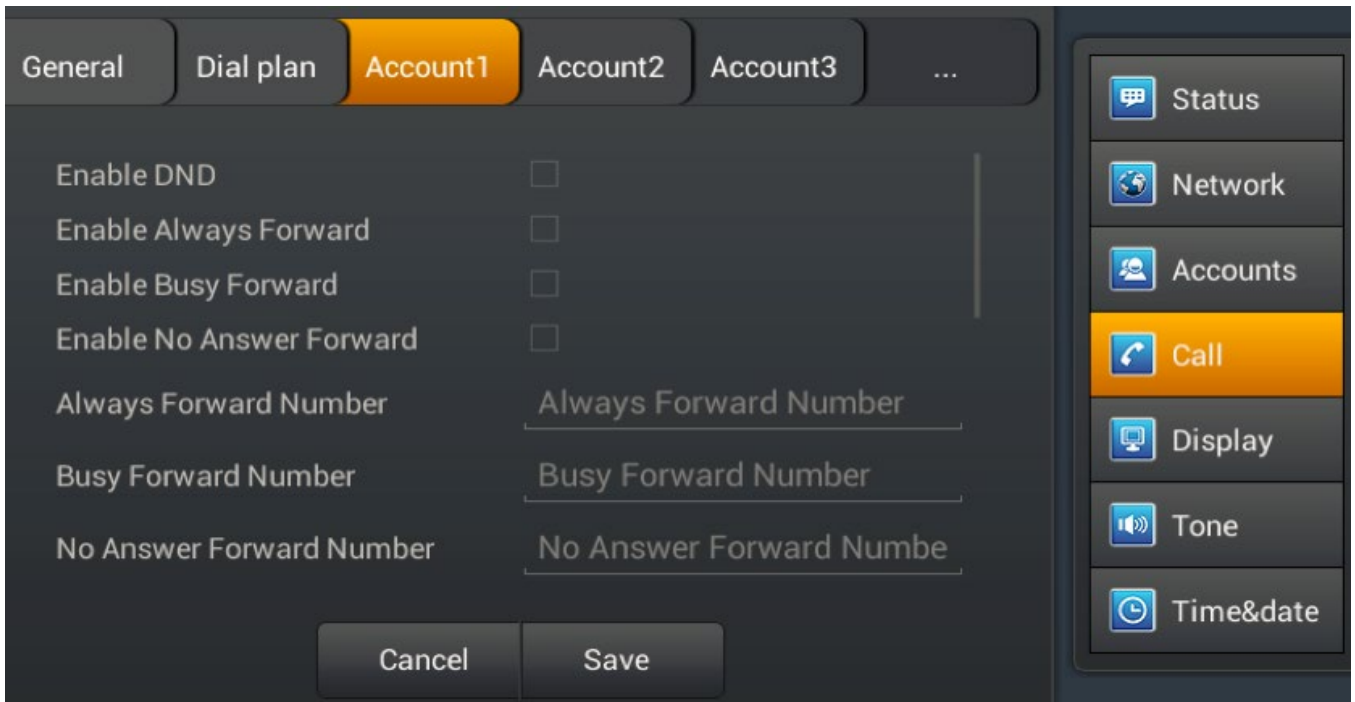

Configuration item	Meaning
Account 1	<p>Enable DND:When enable the DND line, you can choose to enable DND here to control this account reject the incoming call.</p> <p>Enable Always Forward:Set the forward number below and enable this function, when it has a coming call, the phone will forward the call to the setting number and display one missed call.</p> <p>Enable Busy Forward:Same as the above function, but when the phone has one call it can forward the incoming call.</p>

Configuration item	Meaning
Account 1	<p>No Answer Forward Number: Same as the above, when the phone does not answer the call after timeout, it will forward the incoming call.</p> <p>MWI number: Fill in the MWI number.</p> <p>Enable Hotline: Enable this function, configure the hotline number and time, the phone will auto call this number when enter the dialing interface and timeout.</p> <p>Enable auto answer: Enable auto answer and set the timeout, when the phone has incoming call, it will auto answer when time out.</p> <p>Enable missed call log: Enable this function, the status bar has prompt when missed incoming calls and save them to call log history .</p> <p>Caller ID Type: It is default display long number, and support standard ISP number . If not enable, the phone will display last few numbers matched.</p> <p>Enable user=phone: Enable this, the phone can make call directly, if not, you need to precede the phone number with country code and Area code, Depending on your environment.</p> <p>Dial without registered: Set call out by proxy without registration.</p>

Display

Configuring the phone screen displays a number of parameters, including screensavers and power indicator

After enable operator mode, if you press the home key, the main interface will enter dsskey interface. If disable this function, the phone will return to desktop interface when press home key.


When enable shortcuts, you can press and hold the application to set shortcuts to desktop.

Tap "Display" ----> "Display" interface. After configuring the parameters, you can click "Save" button to save successfully.

Tone

Configuration of the telephone voice parameters, including selecting a ringtone, SMS notification tones, keypad tones, and other

Tap "Settings" ----> "Sound" interface. After configuring the parameters, you can click "Save" button to save successfully.

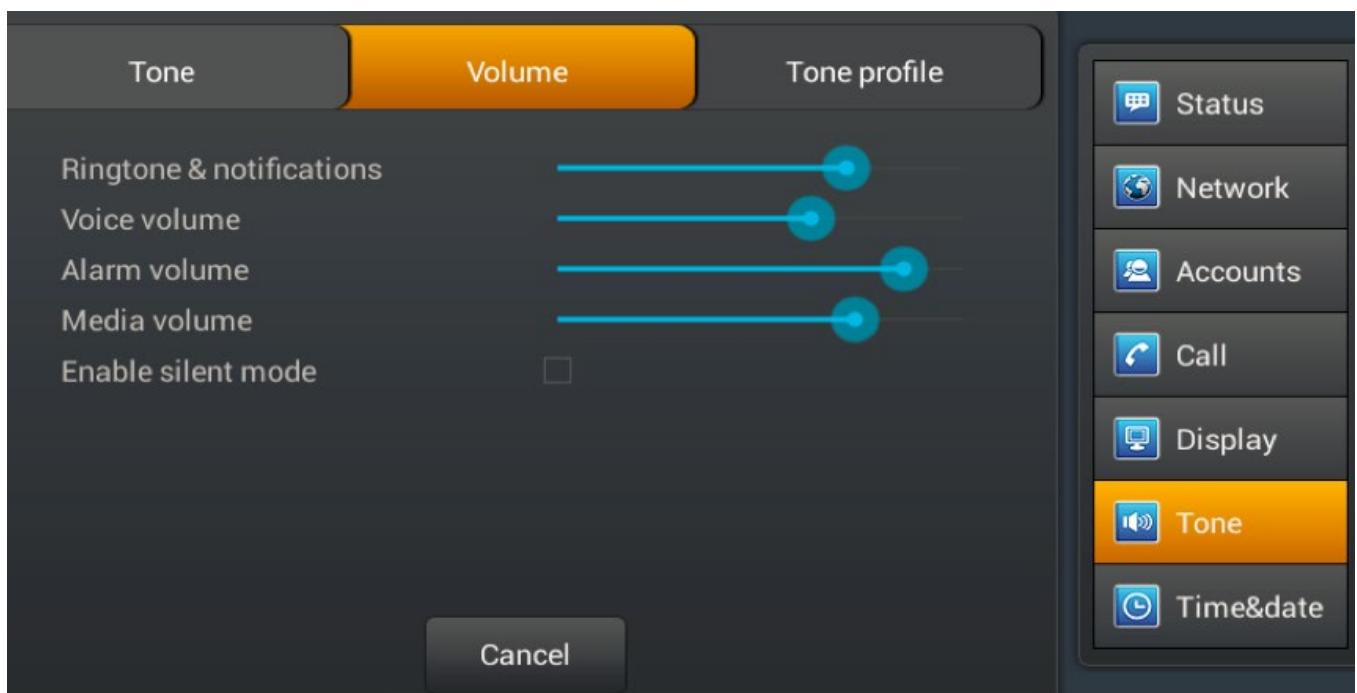

Time&date


Tap “Settings” ----> “Date time” interface. After configuring the parameters, you can click “Save” button to save successfully.

Maintain

Tap “Settings” ----> “Maintain” Enter the interface.

Service port


Tap “Maintain” ----> “Service port” interface. After configured the parameters, you can click “Save” button to save successfully.

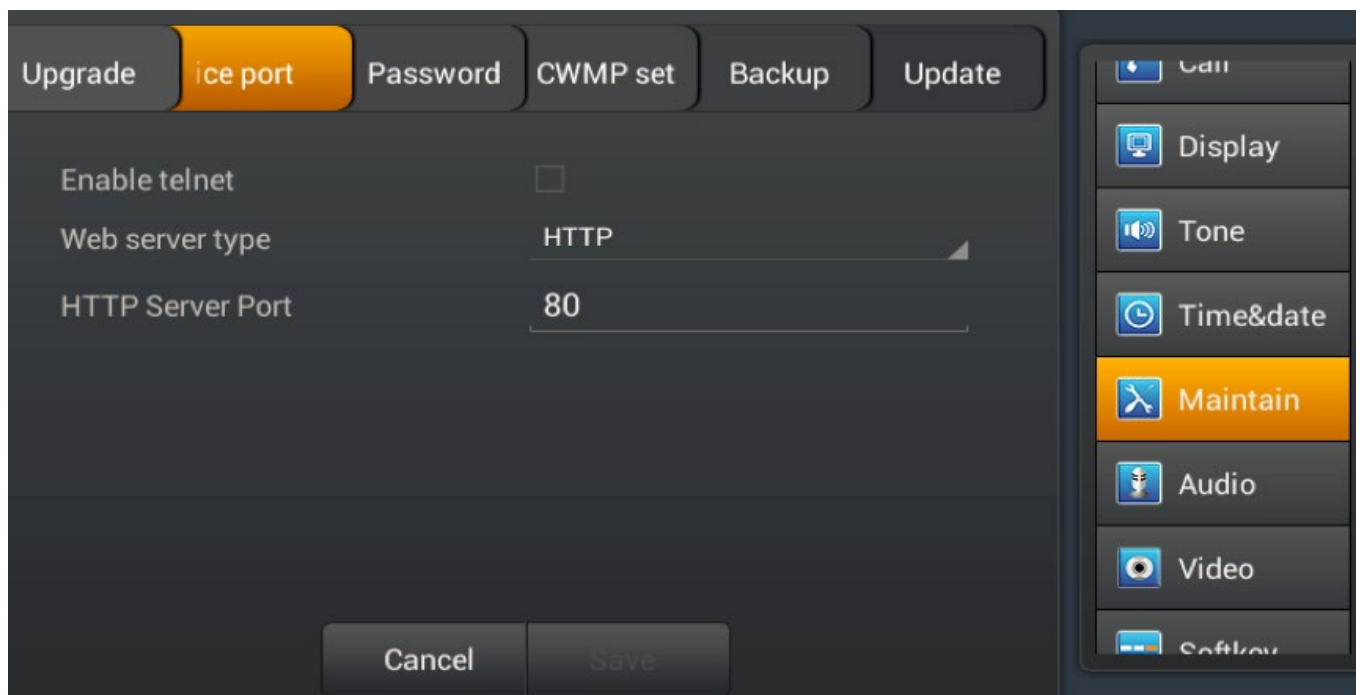

Configuration item	Meaning
Service port	<p>Enable telnet: Open telnet function.</p> <p>Telnet is a common method of remote control of the Web server, end users can enter the command telnet program, these commands will be run on the server, just like directly on the server console, enter the same. Can locally be able to control the server.</p> <p>Web server type: Select "HTTP" or "HTTPS".</p> <p>After selecting one server, you can use the selected server to login the telephone's web page.</p> <p>Such as: <code>https://192.168.1.20</code></p> <p>HTTP port: Input server port, default is 80.</p>

CWMP set

Tap “Maintain”---->” CWMP set” interface. After configured the parameters, you can click “Save” button to save successfully.

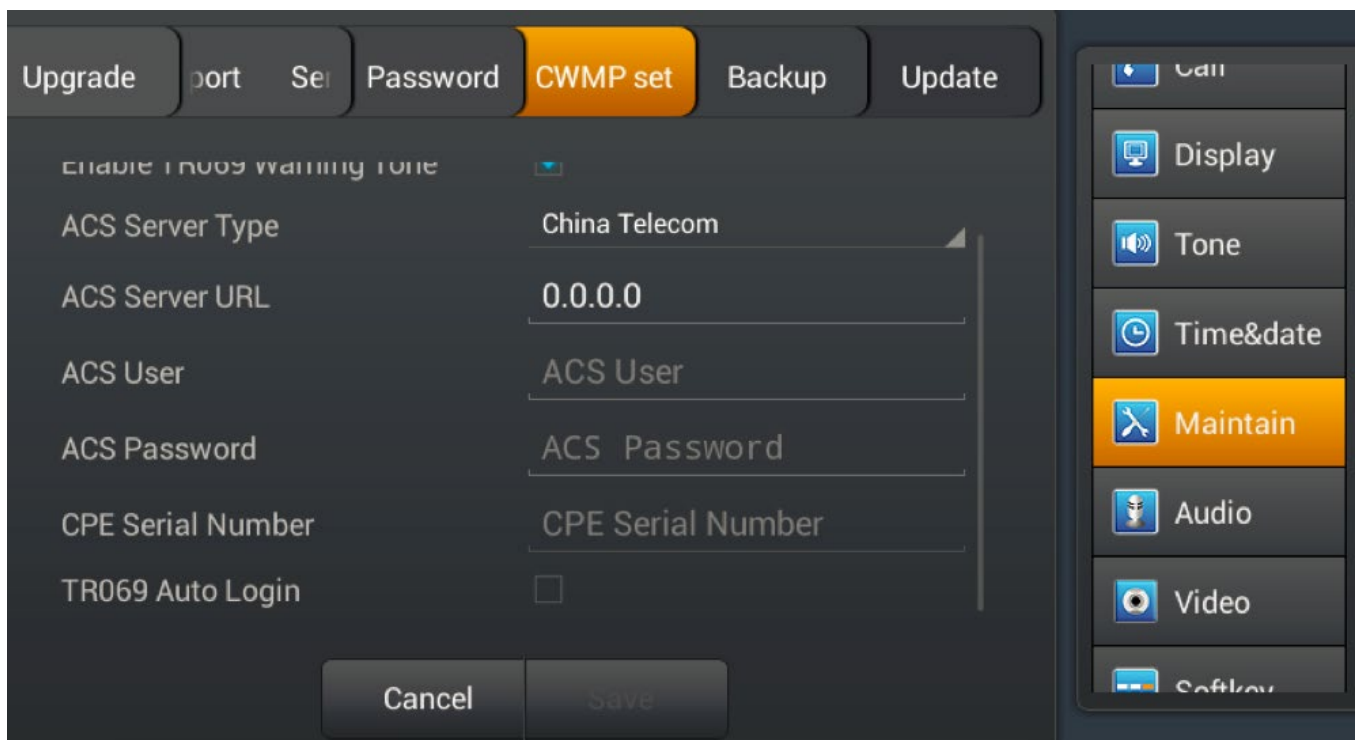


CWMP set interface

Configuration item	Meaning
CWMP set	<p>Enter the password to access the network menu landing configuration interface.</p> <p>Enable TR069: Enable network mode, select China Telecom or Normal.</p> <p>ACS Server:Input the address of the ACS server provider.</p> <p>Account:Input service provider assigns the account.</p> <p>Password:Input the account corresponding password.</p> <p>Serial Number:Input the Serial number.</p> <p>Auto connect:When enabled, you can fill out the account and password.</p>

Backup

Tap “Maintain”---->” Backup” , the default password is 123456, enter the backup interface

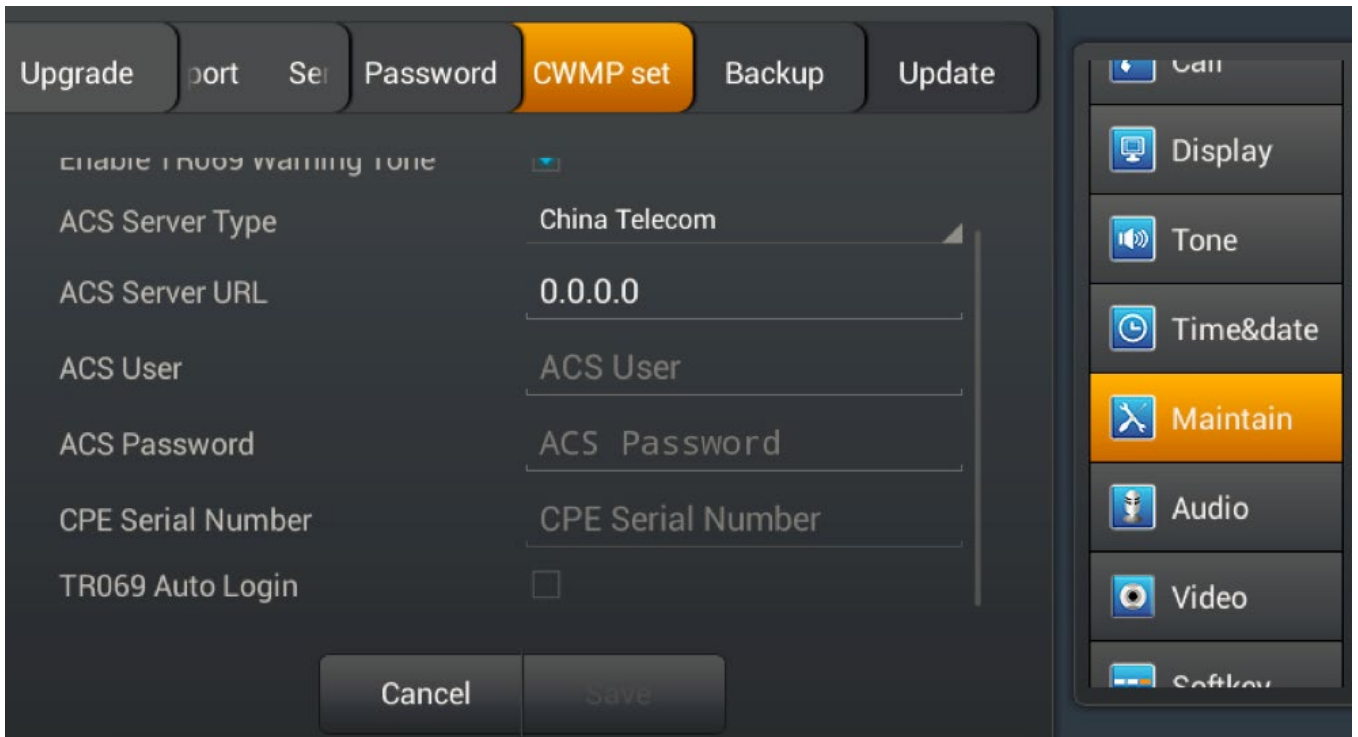


Backup Interface

Configuration item	Meaning
Backup	ResetPhone:This will e rase a ll data from your phone’s internal storage. Backup:The contact data, phone settings data and calender backup to a specified folder. Recovery:Recovery has backup contacts, phone settings confi- guration.

Update

Tap “Maintain”---->” Update”, enter the update interface.

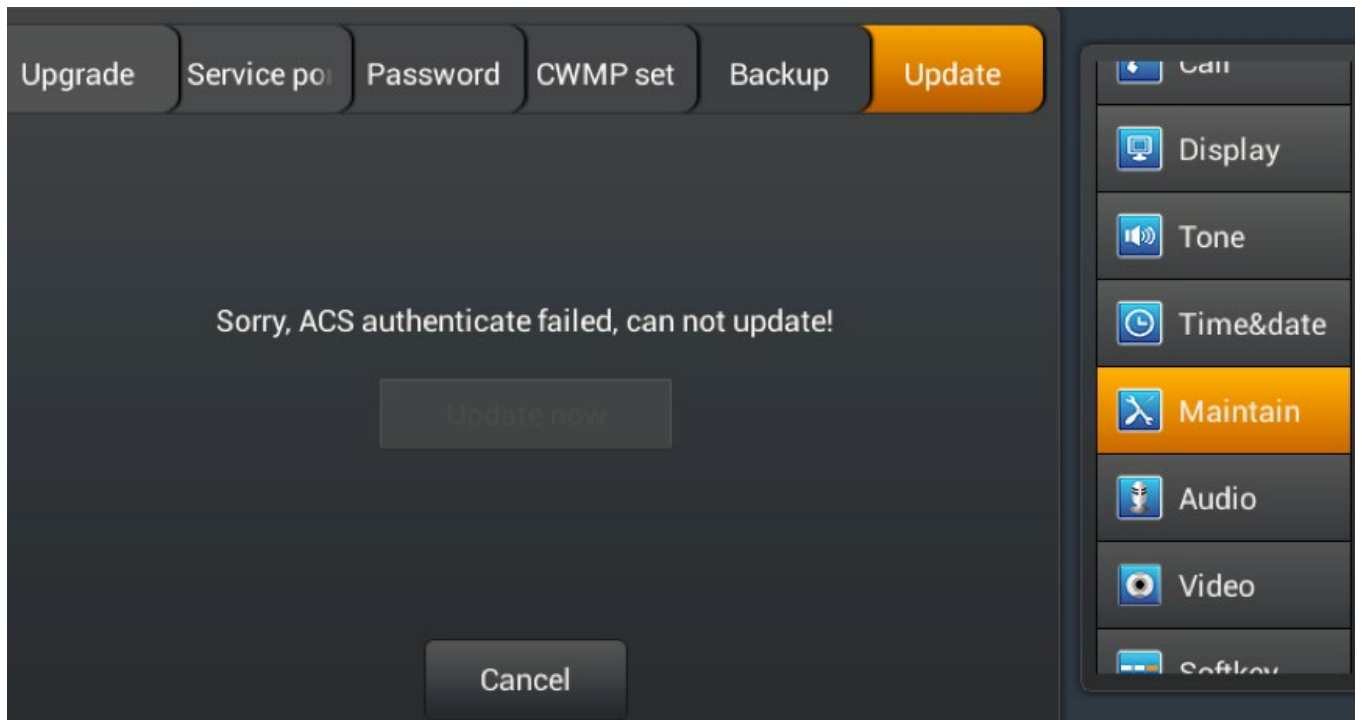

Update Interface

Configuration item	Meaning
System update	For ACS certification, authentication is successful you can check the system updates

Audio

Audio

Touch "Audio"----> "Audio" interface. This is global setting, applies to all the sip lines. After configuring the parameters, you can click "Save" button to save successfully.




Audio Interface

Configuration item	Meaning
Audio	Enable VAD: Whether to enable VAD. (Voice Activity Detection); If you enabling VAD function, then the G.729 payload length cannot be set greater than 20ms.

Audio param

Touch "Audio"----> "Audio param" interface. After configuring the parameters, you can

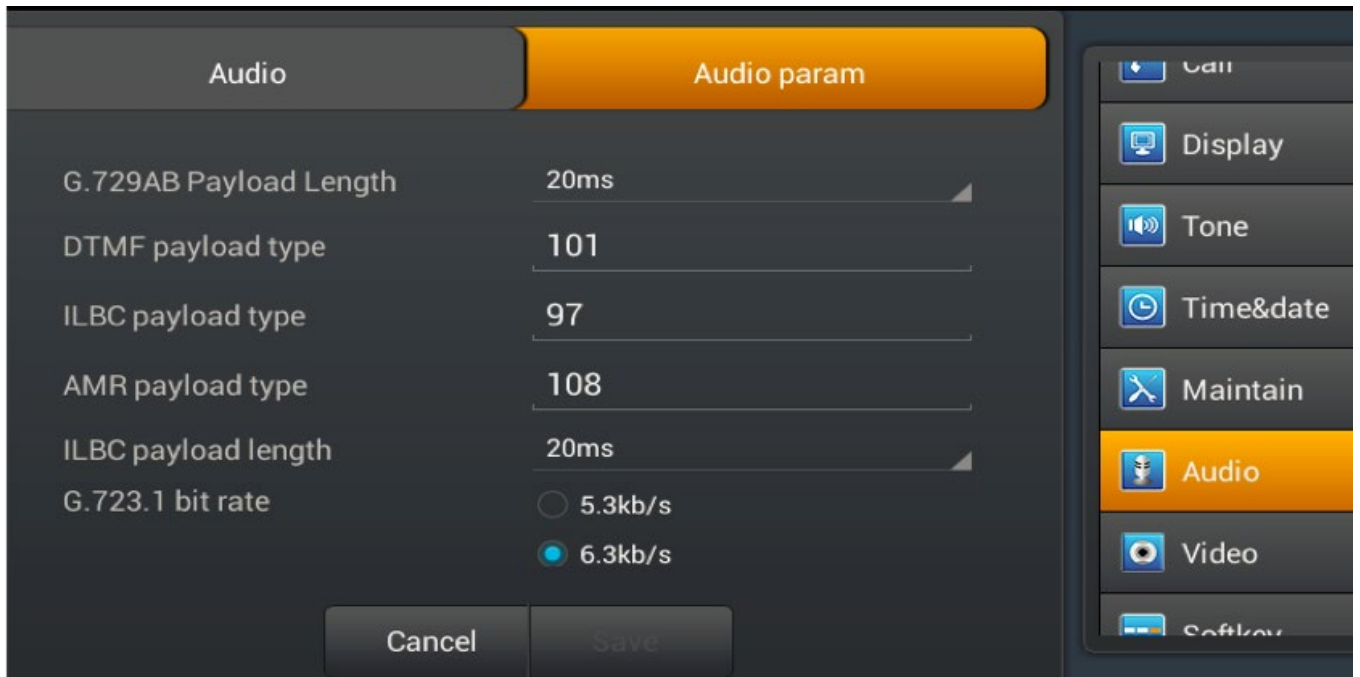


Video

Touch “Settings” ----> “Video” and enter the settings interface.

Video param


Touch “Video”----> “Video param” interface. After configuring the parameters, you can click “Save” button to save successfully.

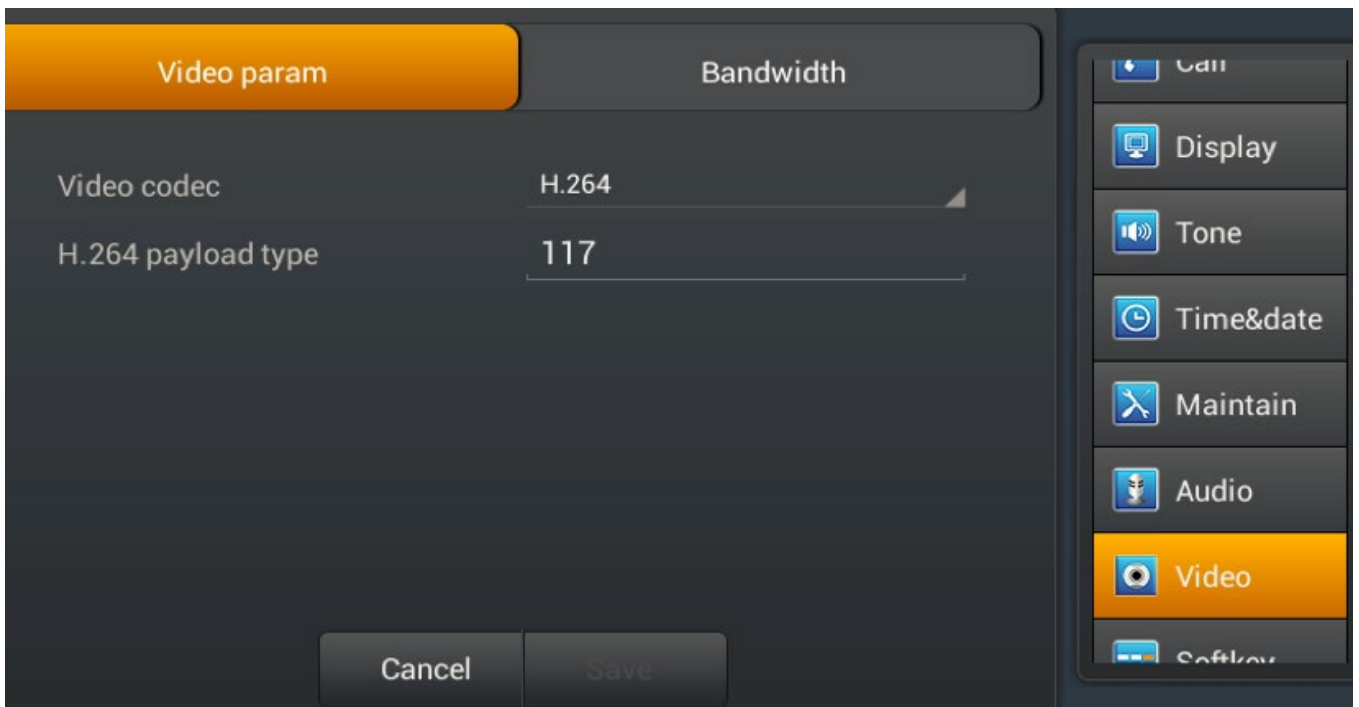

Note:If you want More clear and smooth video screen, please select H.264 within 2M bandwidth.

Bandwidth

Touch "Video"----> "Bandwidth" interface. After configuring the parameters, you can click "Save" button to save successfully.

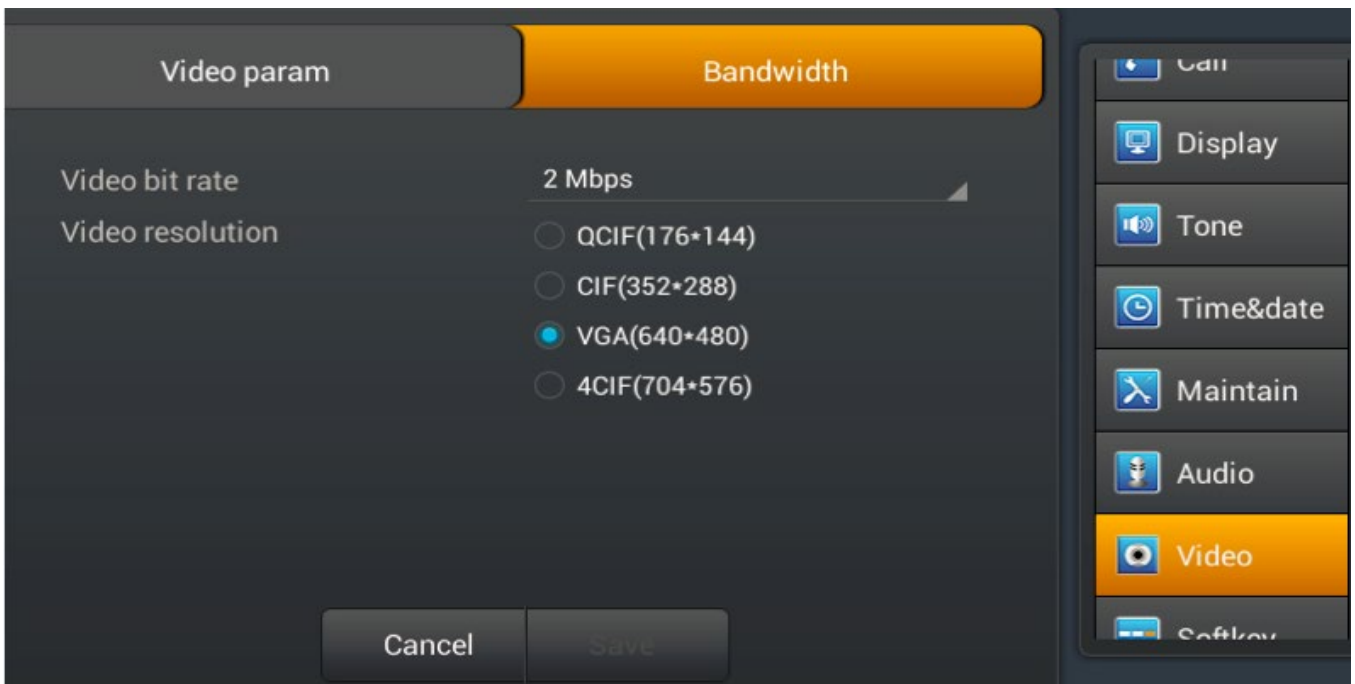


Banwidth Interface

Configuration item	Meaning
Bandwidth	<p>Video bit rate: Set receiving video bandwidth in video calls. You can choose 11 kinds of video bandwidth types ("64Kbps", "192Kbps", "256Kbps", "384Kbps", "512Kbps", "768Kbps", "1Mbps", "1.6Mbps", "2Mbps", "3Mbps" or "4Mbps").</p> <p>Video Resolution: Set video encoding resolution in a video call. You can choose 4 types of video resolution ("QCIF (176*144)", "CIF (352*288)", "VGA(640*480)" or "4CIF (704*576)").</p>


Softkey

Tap “Settings->Softkey” enter softkey interface. Select softkey-screen first, then add or delete the softkey by clicking the arrow, you can also click the arrow up or down to adjust the softkey’s position.

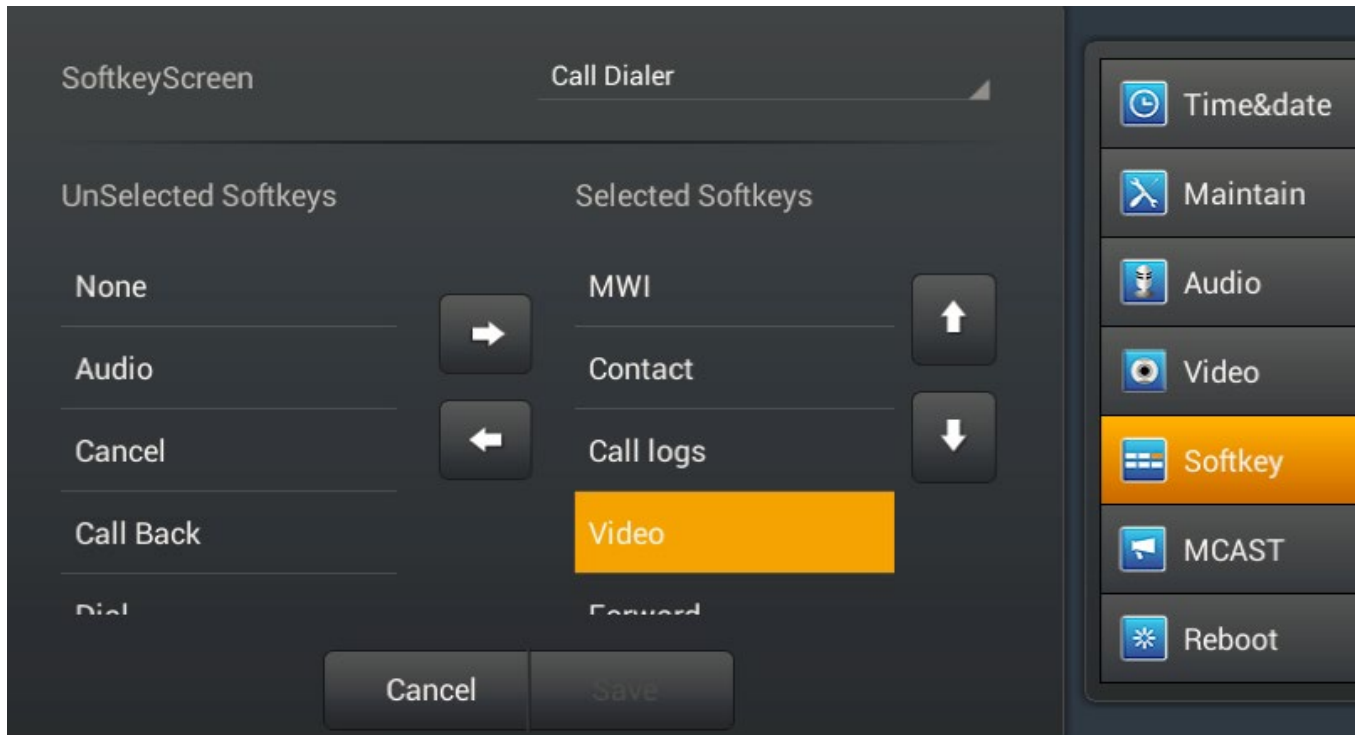

Softkey Interface

For example, the below picture shows the call dialer softkey. It can show up to six keys.

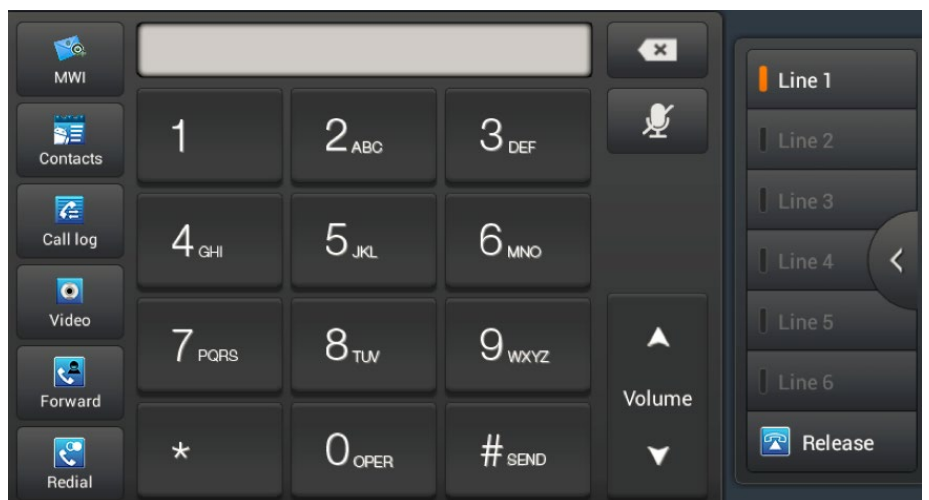

MCAST

This feature allows you to make some kind of broadcast call to people who are in multicast group. You can configure a multicast DssKey on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Tap “Settings->MCAST” enter the multi-cast interface, you can follow the prompts to fill in the name and host, you can also set the priority for the call.

MCAST Setting	Meaning
Normal Call Priority	Define the priority of the active call, 1 is the highest priority, 10 is the lowest.
Normal Call Priority	The voice call in progress shall take precedence over all incoming paging calls.
Normal Call Priority	Listened multicast server name
Host:port	Listened multicast server @ multicast IP address and port.


Reboot

Tap “Maintain”----> “Reboot” interface. You can click “Reboot” button to pop-up “reboot” dialog box, click “OK” to reboot the phone, click “Cancel” will have no operation. address(es) without involving SIP signaling. You can also configure the phone to

Call Service


Register

You can register the sip line on the web or by LCD, the below picture show the web register configuration. The status can show the if the line register successfully. When register success, the upper-left of status bar will show the display name and number

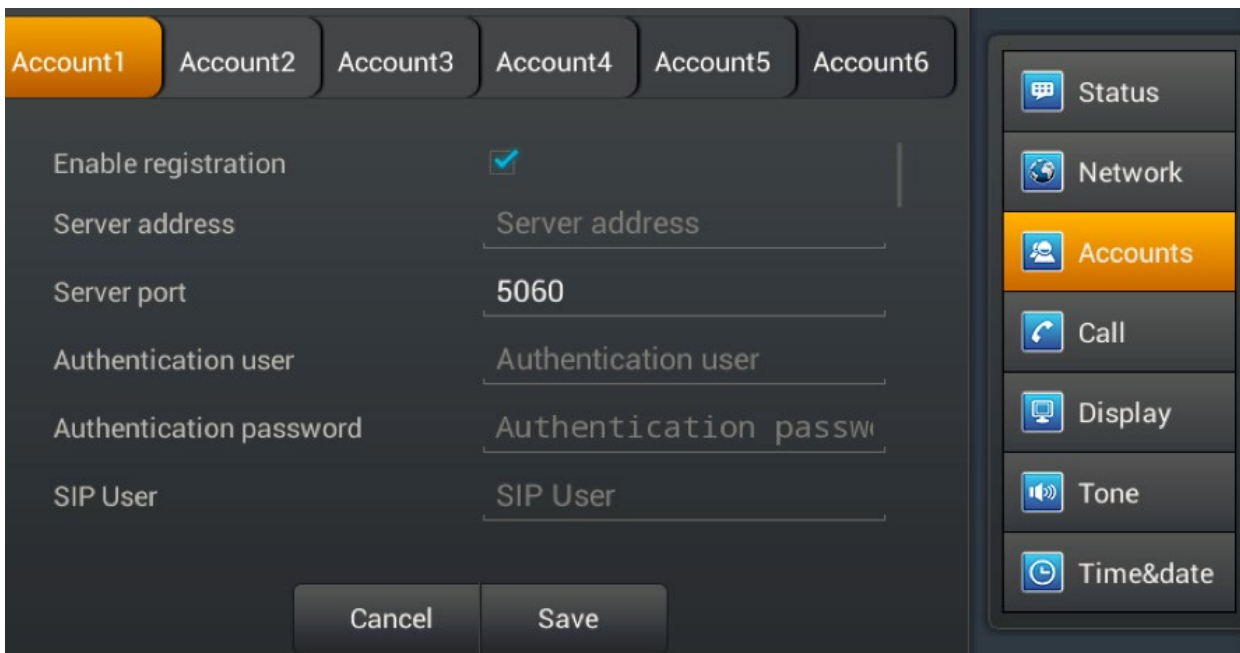

Outgoing & Incoming call

1. Pick up the handset, press the headset/handsfree key or click line key to the dial interface;
2. Select the line and enter the number ;
3. Click #send, it will call out follow the default dial mode you set;
4. You can also click video to invite a video call.

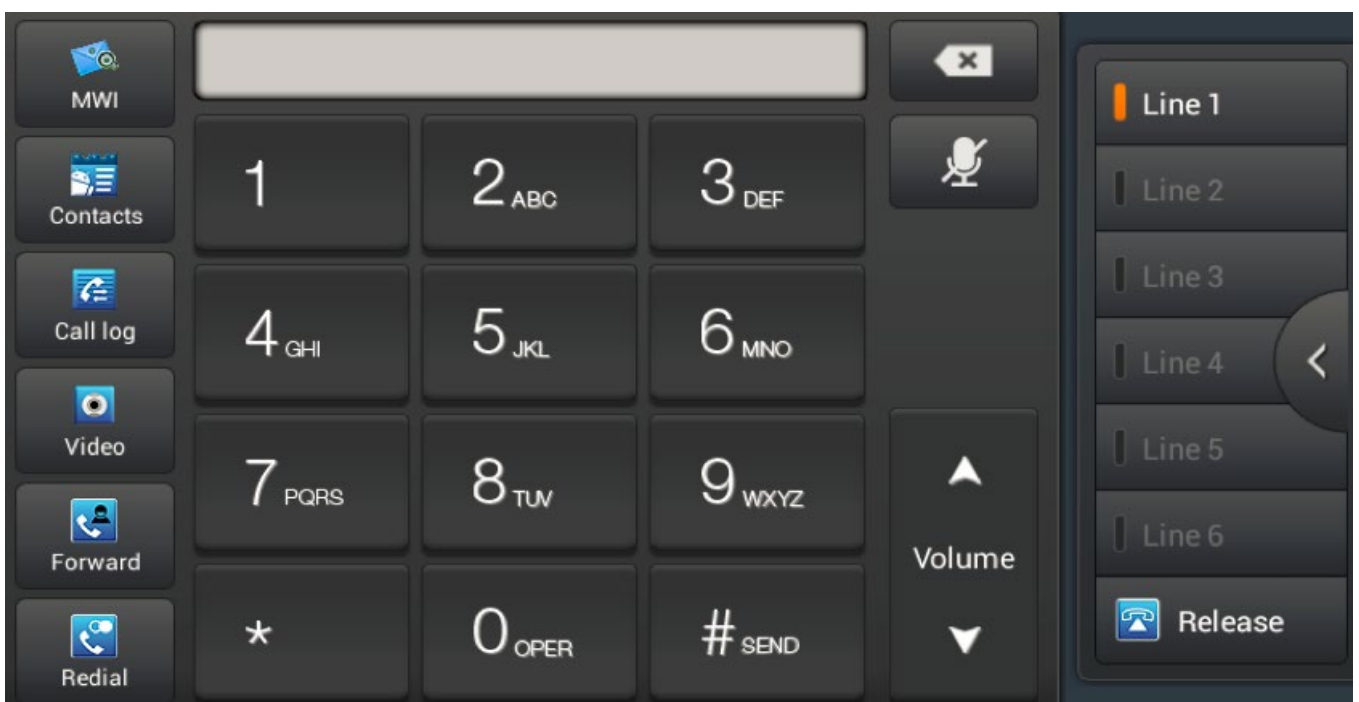





When the phone has an incoming call, you can click audio or video to answer the call, if you did not select, the phone will follow the default ans mode you set when you pick up the handset. You can also choose forward or reject the call.

Video Call

1. Pick up the handset, press the headset/handsfree key or click line key to the dial interface;
2. Select the line and enter the number;
3. Click "Video" to make a call;

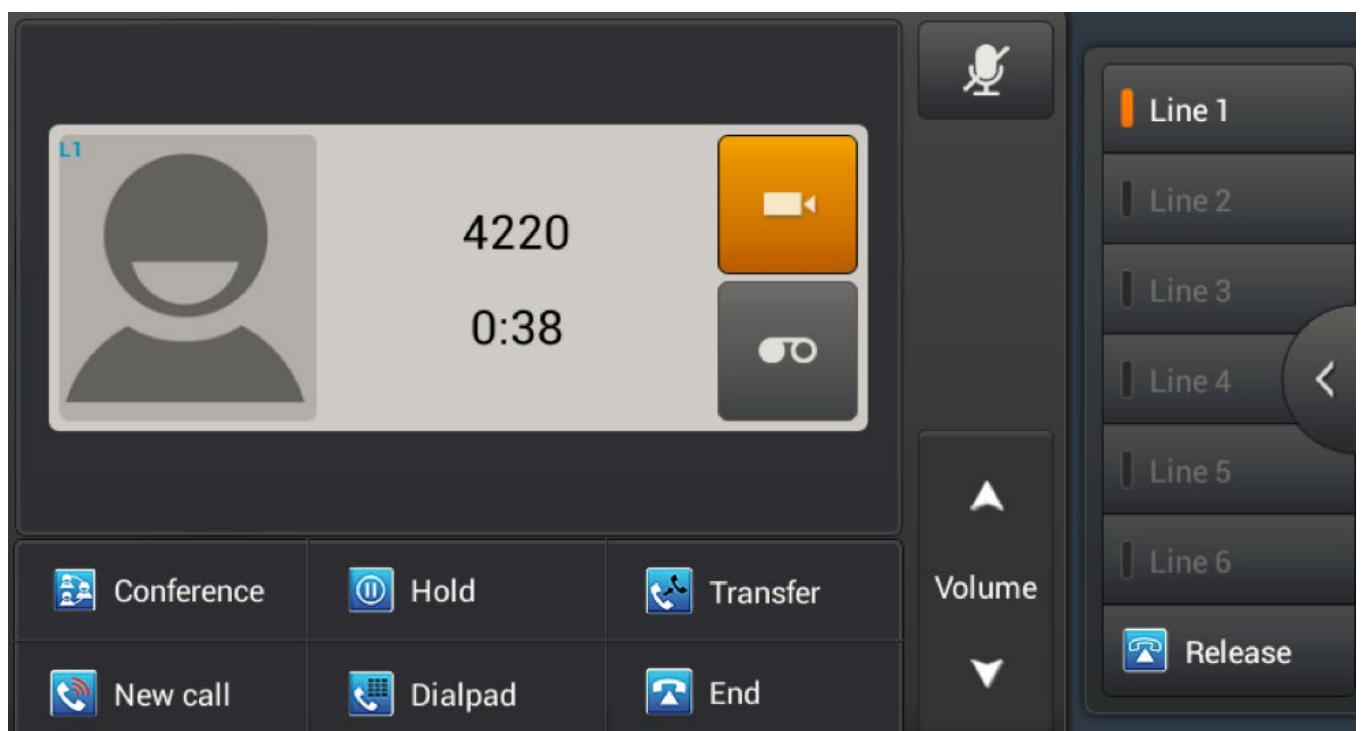
NOTE: only available to DW810 models




4.  Click to end or re-invite the video;
5.  Click and to adjust the  video screen mode and video mode.

Blind Transfer

1. During the call, click transfer enter the dial interface;
2. Input the number or select contact from contacts or call log;
3. Click transfer;
4. If transfer success, the phone will auto end the call, if transfer failed, the phone will return to the conversation interface and hold the call.

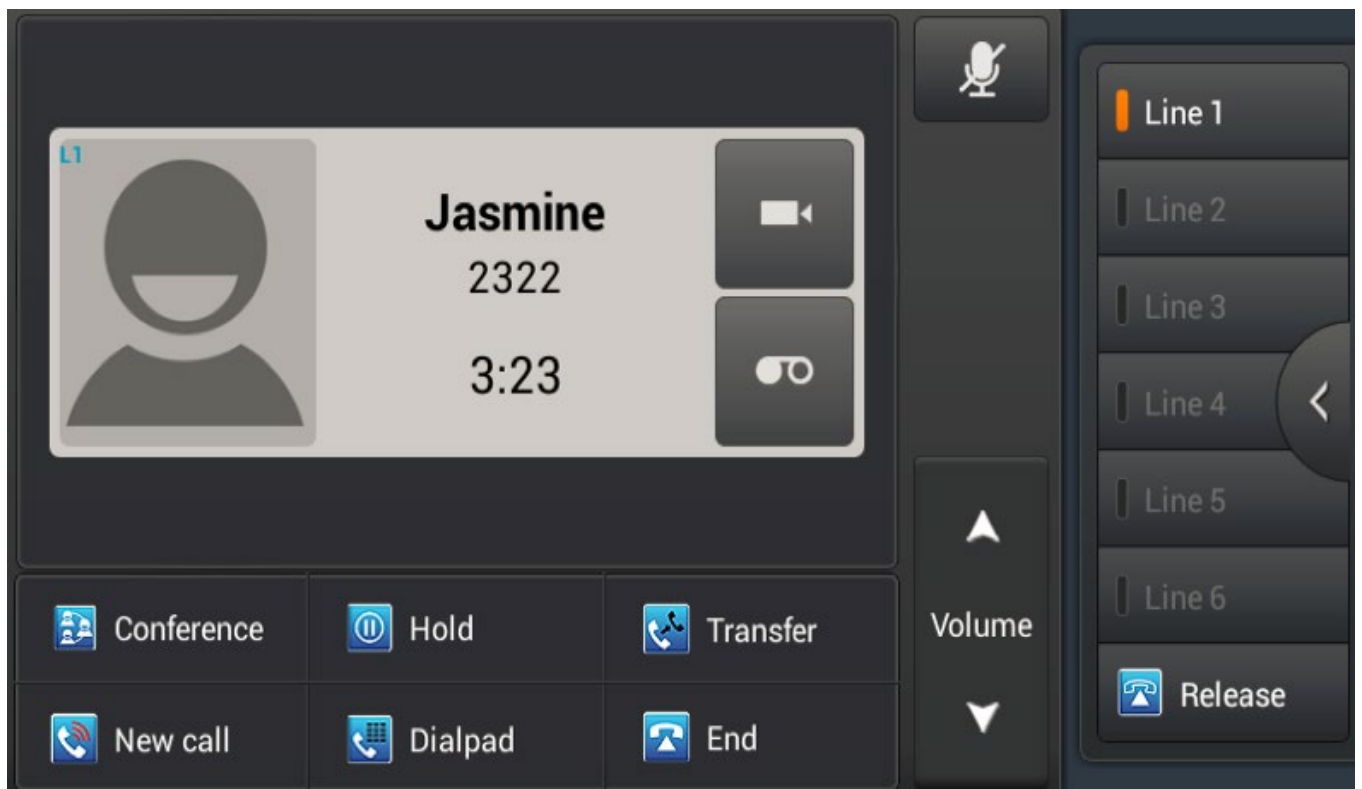

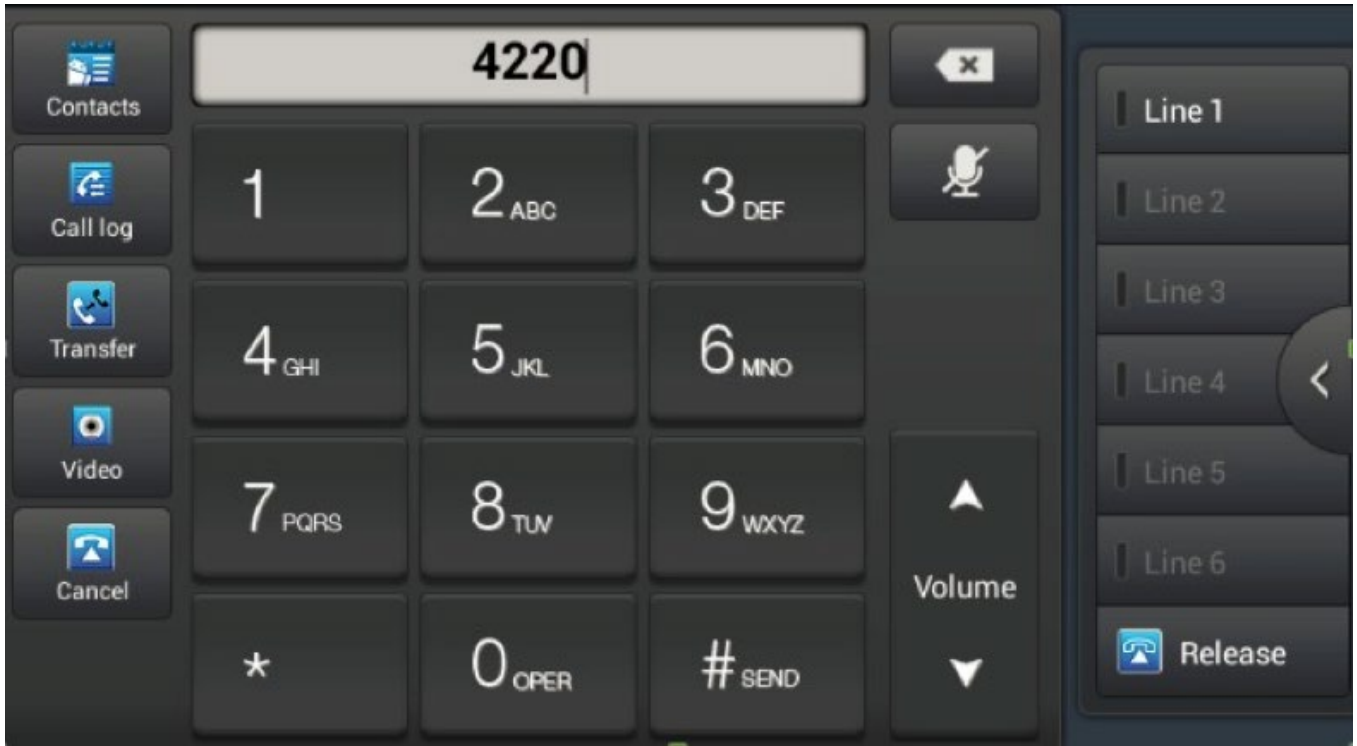

Semi-attended Transfer

1. During the conversation, click transfer enter the dial interface;
2. Input the number or select contact from contacts or call log, final, click #send;
3. When the other end ringing, click transfer to complete the semi attend transfer.

NOTE: If you want to use this function, you need to enable the call waiting and call transfer.

Semi-attended Transfer


1. During the conversation, press the transfer key ;
2. Input the number you want to transfer to;
3. Tap "#send";
4. Press transfer key after the call answered , and transferred successfully.

NOTE: Call waiting and call transfer must be enabled.

The SIP server must support RFC3515.

Conference Call


1. Press the CONF softkey during an active call.
2. The first call will be placed on hold and dial tone will be heard.
3. Dial the number to be added to the conference.
4. Press Send.
5. When the call is answered, the conference will be started.
6. To release the conference, press Split.

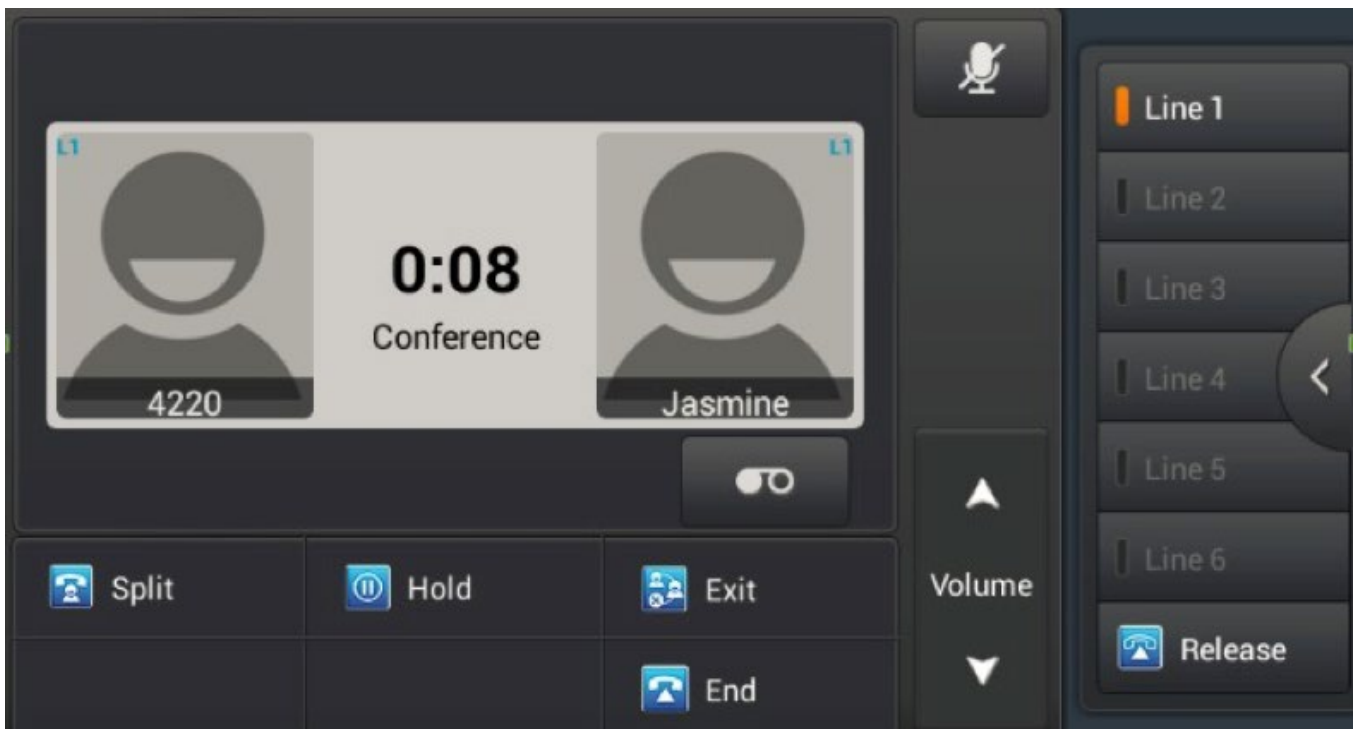

Conference Interface

Call Hold


1. Click the “Hold” to put the active call on hold.
2. If there is only one call on hold, press the “Resume” to retrieve the call.
3. If there is more than one call on hold, click the dialog to change conversation, then click the Resume button to retrieve the call.

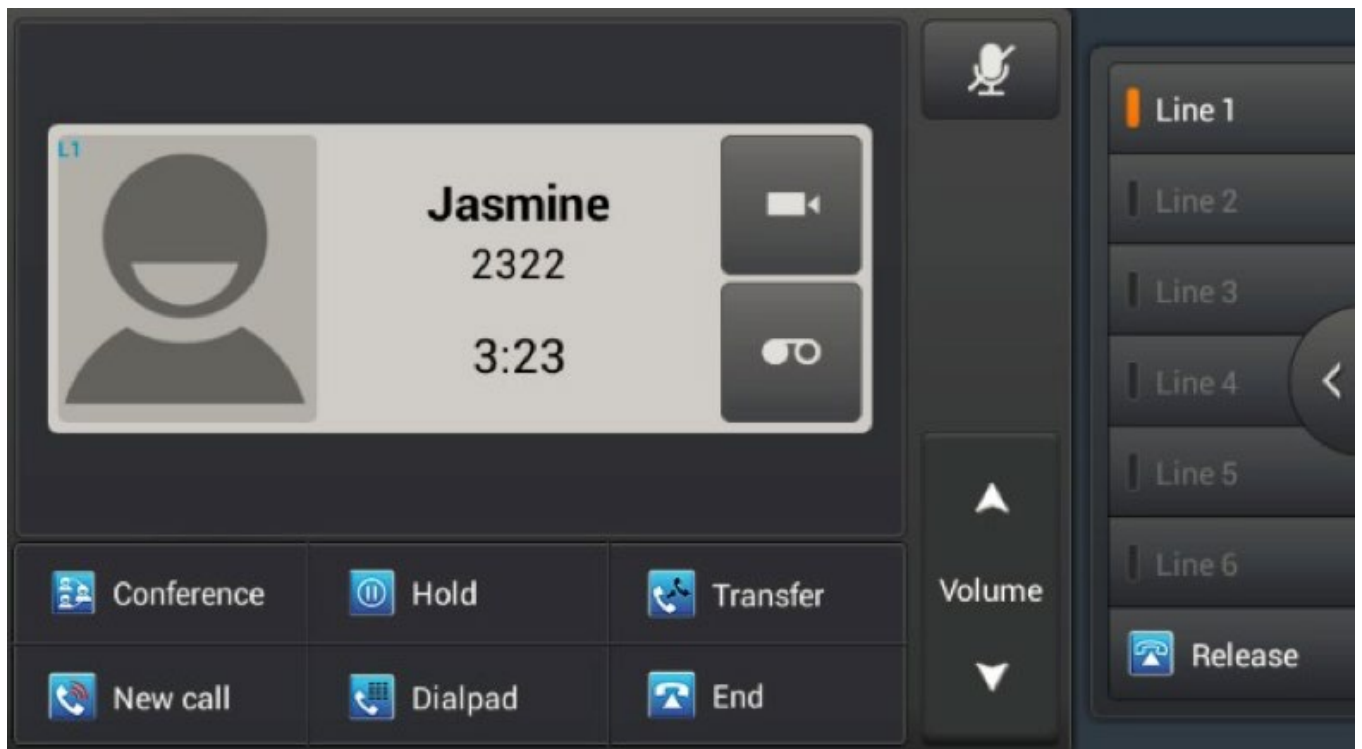

1. Click the “Hold” to put the active call on hold.
2. If there is only one call on hold, press the “Resume” to retrieve the call.
3. If there is more than one call on hold, click the dialog to change conversation, then click the Resume button to retrieve the call.


Android Settings

Ethernet configuration

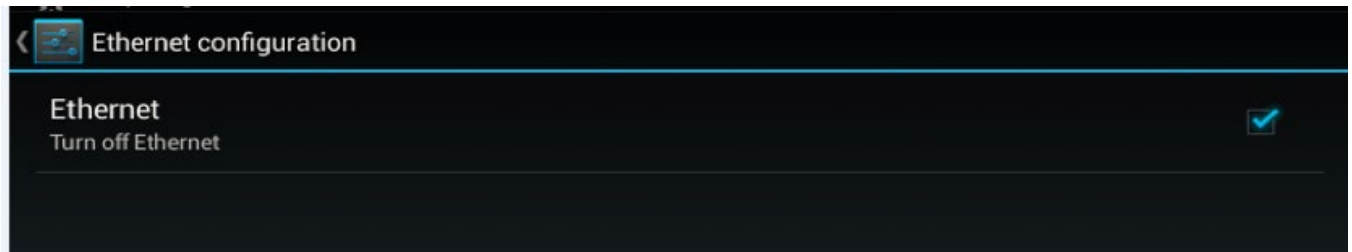


Click “Settings”, select “ Ethernet configuration” switch to the Ethernet configuration interface. You can choose to turn on or turn off the Ethernet, if you turn on the Ethernet, it will auto connect to networking, otherwise, the phone can not connect to networking

Security

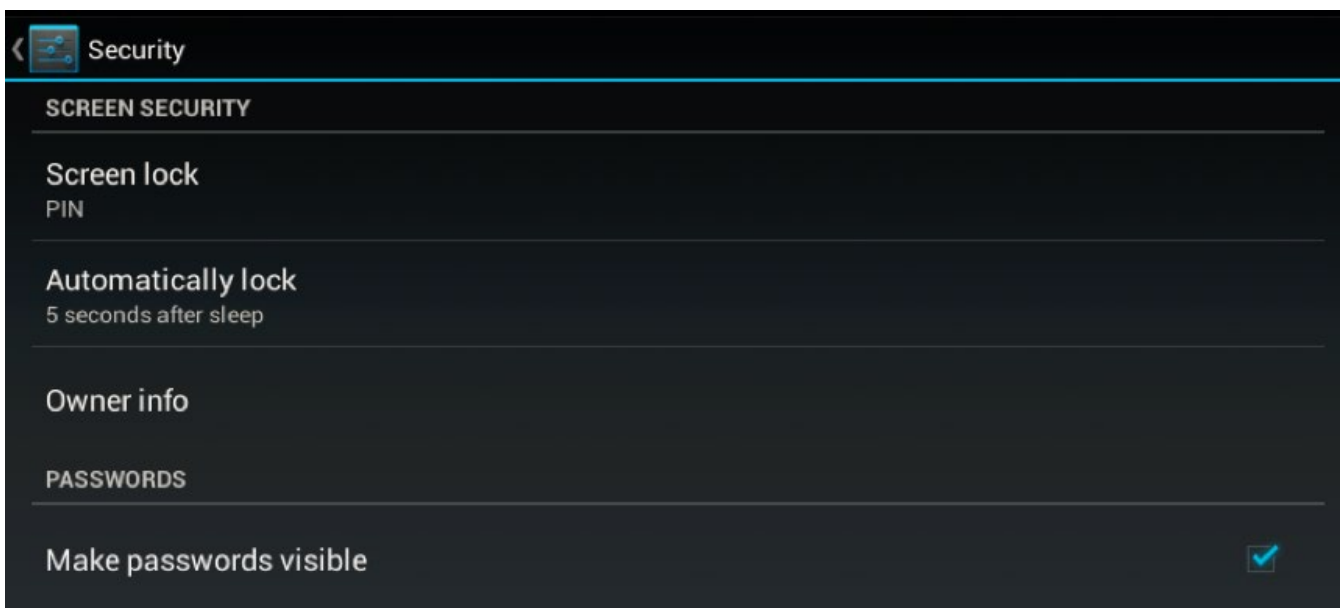

1. Set the Screen lock
 - Click “Settings”, enter the android settings interface;
 - Click Security->Screen lock enter the configuration interface;
 - Follow the prompts to set screen lock which you want to use;
Set automatically lock time.
2. Set owner info, it will display on the lock screen.
3. Set if make passwords visible

Language&Input

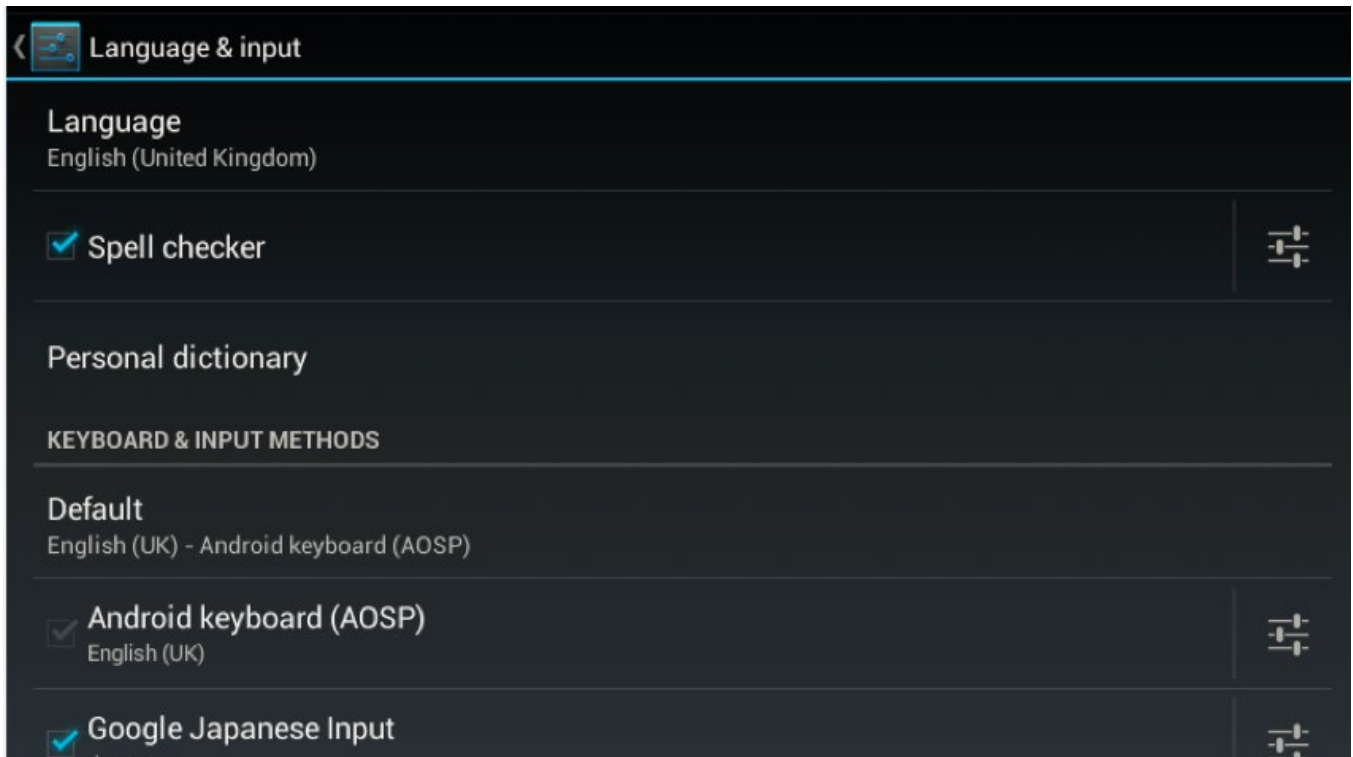

Language&input interface

1. Click “Settings” enter the android settings interface;
2. Click language&input enter the above picture interface;
3. Select language to set what you want to use;
4. Tick the input method which you want to use.

Web Settings

Logon

There are two levels of access: root level and general level. A user with root level access can browse and set all configuration parameters, while a user with general level can set all configuration parameters except server parameters for SIP and can not browse the configuration file.

Default user with general level

Username: guest

Password: guest

Default user with root level:

Username: admin

Password: admin



User:

Password:

Language: English ▼

Logon

Network

About the network mode settings, please refer to the phone settings.

QoS & VLAN

The phone supports 802.1Q/P protocol and DiffServ configuration. Use of a Virtual LAN (VLAN) allows voice and

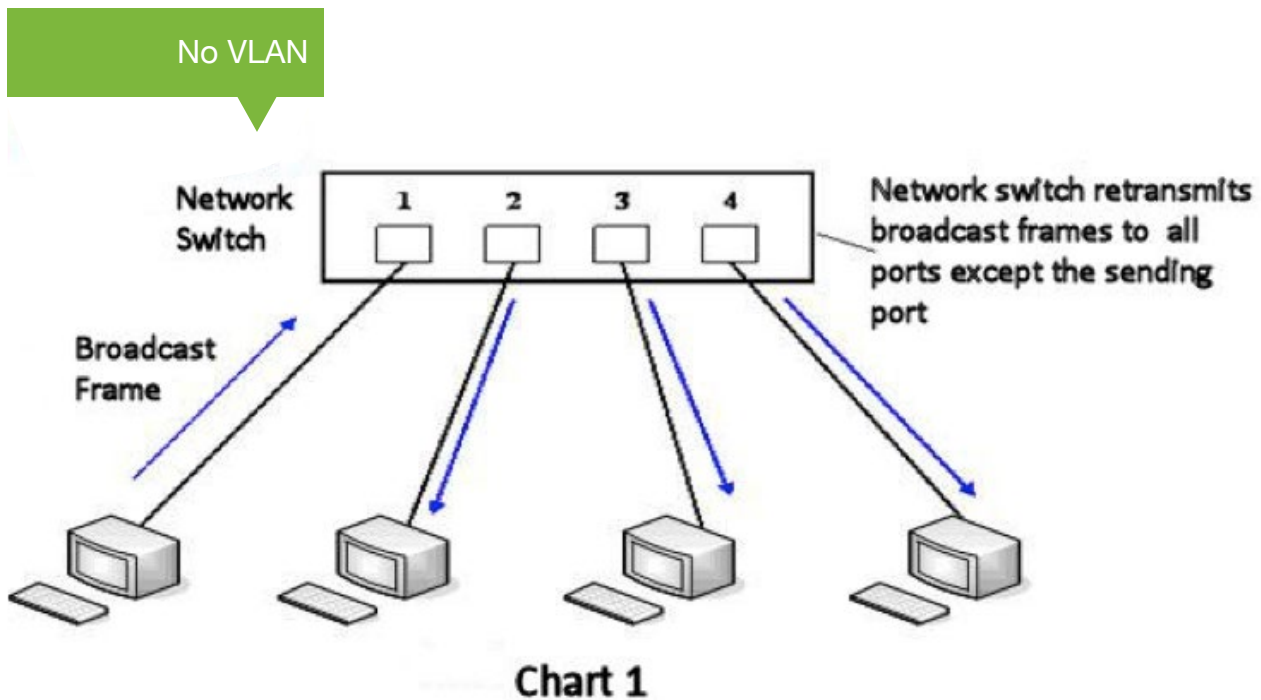


Chart 1 shows a network switch with no VLAN. Any broadcast frames will be transmitted to all other ports. For example, and frames broadcast from Port 1 will be sent to Ports 2, 3, and 4.

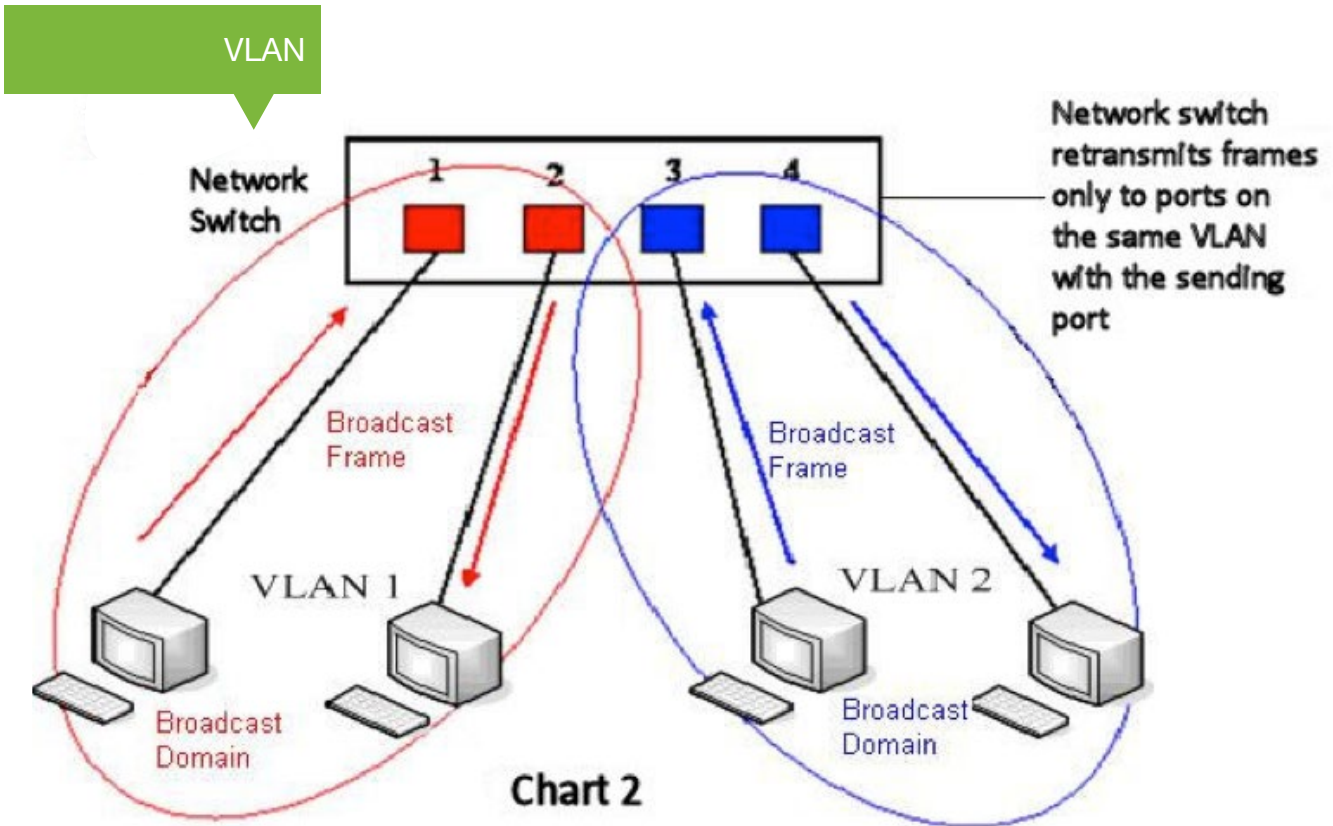



Chart 2 shows an example with two VLANs indicated by red and blue. In this example, frames broadcast from Port 1 will only go to Port 2 since Ports 3 and 4 are in a different VLAN. VLANs can be used to divide a network by restricting the transmission of broadcast frames.

Note: In practice, VLANs are distinguished by the use of VLAN IDs.

WAN		QoS&VLAN		SERVICE PORT		TIME&DATE	
Link Layer Discovery Protocol (LLDP) Settings							
Enable LLDP	<input type="checkbox"/>	Packet Interval(1~3600)	<input type="text" value="60"/>	second(s)			
Enable Learning Function	<input type="checkbox"/>						
Quality of Service (QoS) Settings							
Enable DSCP	<input type="checkbox"/>	SIP DSCP	<input type="text" value="46"/>	(0~63)			
Audio RTP DSCP	<input type="text" value="46"/>	Video RTP DSCP		<input type="text" value="46"/>	(0~63)		
WAN Port VLAN Settings							
Enable WAN Port VLAN	<input type="checkbox"/>	WAN Port VLAN ID	<input type="text" value="256"/>	(0~4095)			
802.1P Priority	<input type="text" value="0"/>	(0~7)					
LAN Port VLAN Settings							
LAN Port VLAN Mode	<input type="text" value="Follow WAN"/>	LAN Port VLAN ID	<input type="text" value="254"/>	(0~4095)			
<input type="button" value="Apply"/>							

Service Port

WAN	QoS&VLAN	SERVICE PORT	TIME&DATE
Service Port Settings 			
Web Server Type		HTTP ▼	
HTTP Server Port		80	
HTTPS Server Port		443	
Telnet Port		23	
RTP Port Range Start		10000	
RTP Port Quantity		200	
<input type="button" value="Apply"/>			

Field Name	Meaning
Web Server Type	Specify Web Server Type: HTTP or HTTPS
HTTP Port	Port for web browser access. Default value is 80. To enhance security, change this from the default. Setting this port to 0 will disable HTTP access. Example: The IP address is 192.168.1.70 and the port value is 8090, the accessing address is http://192.168.1.70:8090.
HTTPS Port	Port for HTTPS access. Before using https, an https authentication certification must be downloaded into the phone. Default value is 443. To enhance security, change this from the default.
RTP Port Range Start	Set the beginning value for RTP Ports. Ports are dynamically allocated.
RTP Port Quantity	Set the maximum quantity of RTP Ports. The default is 200.

Notes: Any changes made on this page require a reboot to become active.

It is suggested that changes to HTTP Port and Telnet ports be values greater than 1024. Values less than 1024 are reserved.

If the HTTP port is set to 0, HTTP service will be disabled.

Registration

SIP Line SIP 2

Basic Settings >>

Status	Registered	Domain Realm	<input type="text"/>
Server Address	<input type="text" value="172.16.1.2"/>	Proxy Server Address	<input type="text"/>
Server Port	<input type="text" value="5060"/>	Proxy Server Port	<input type="text"/>
Authentication User	<input type="text" value="2321"/>	Proxy User	<input type="text"/>
Authentication Password	<input type="text" value="****"/>	Proxy Password	<input type="text"/>
SIP User	<input type="text" value="2321"/>	Backup Proxy Server Address	<input type="text"/>
Display Name	<input type="text" value="Jasmine"/>	Backup Proxy Server Port	<input type="text" value="5060"/>
Enable Registration	<input checked="" type="checkbox"/>	Server Name	<input type="text"/>

Audio Codecs >>

Advanced SIP Settings>>

Note: If the proxy configuration is same as the register configuration, in the web interface, the proxy fields are empty. While it is different with register configuration, the config info will display in the web interface. The backup proxy server will be used if the primary server is unavailable.

Set the audio codecs for current sip line.

SIP Line SIP 2

Basic Settings >>

Audio Codecs >>

<p>Disable codecs</p> <div style="border: 1px solid #ccc; padding: 5px; min-height: 150px;"> <p>G.711U G.722 G.723.1 G.726-32 G.729AB AMR</p> </div>	<input type="button" value="→"/> <input type="button" value="←"/>	<p>Enable codecs</p> <div style="border: 1px solid #ccc; padding: 5px; min-height: 150px;"> <p>G.711A</p> </div> <div style="text-align: right; margin-top: 5px;"> <input type="button" value="↑"/> <input type="button" value="↓"/> </div>
--	--	--

Advanced SIP Settings>>

Dial Plan

Basic Settings

Basic Settings

- Press "#" to Send
- Send after second(s)(3~30)
- Press # to Do Blind Transfer
- Blind Transfer on Onhook
- Attended Transfer on Onhook
- Attended Transfer on Conference Onhook
- Dial Prefix
- Enable E.164

Apply

This phone supports 7 dialing modes:

1. Press # to Send– Dial the desired number, and press # to send it to the server.
2. Send after seconds – Number will be sent to the server after the specified time.
3. Press # to Do Blind Transfer - Press # after entering the target number for the transfer. The phone will transfer the current call to the third party.
4. Blind Transfer on Onhook - Hang up after entering the target number for the transfer. The phone will transfer the current call to the third party.
5. Attended Transfer on Onhook - Hang up after the third party answers. The phone will transfer the current call to the third party.
6. Attended Transfer on Conference Onhook- Hang up during a 3-way conference call, the other two ways will make a call.
7. Dial Prefix- If you set the prefix is 135856, and you want to dial the number 13585679801. Then when you dial the number, you can press and hold 0, when the "+" appears, you can just input 79801 and send the number, the "+79801" is the number you input, but you can see the dialing number is 13585679801.
8. Enable E.164- You can refer to the E.164 standard.

Dial Plan Add

This feature allows the user to create rules to make dialing easier. There are several different options for dial rules. The examples below will show how this can be used.

Example 1: Substitution -- Assume that it is desired to place a direct IP call to IP address

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix	Media
"123"	Out	No	SIP(172.16.2.208:5060)			Default

172.168.2.208. Using this feature, 123 can be substituted for 172.168.2.208.

Example 2: Substitution -- To dial a long distance call to Beijing requires dialing area code 010 before the local phone number. Using this feature 1 can be substituted for 010. For example, to call 62213123 would only require dialing 162213123 instead of 01062213123.

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix	Media
"1"	Out	No	Default	rep:010(1)		Default

Example 3: Addition -- Two examples are shown. In the first case, it is assumed that 0 must be dialed before any 11 digit number beginning with 13. In the second case, it is assumed that 0 must be dialed before any 11 digit number beginning with 135, 136, 137, 138, or 139. Two different special characters are used.

x -- Matches any single digit that is dialed.

[] -- Specifies a range of numbers to be matched. It may be a range, a list of ranges separated by commas, or a list of digits.

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix	Media
"13[2-9]xxxxxxxx"	Out	Yes	Default	add:0		Default
"131xxxxxxxx"	Out	Yes	Default	add:0		Audio

Dial Plan Add

Digit Map

Apply to Call Match to Send Media

Line Destination Port

Alias(Optional) Number Length


Suffix(Optional)

Field Name	Explanation
Phone number	<p>There are two types of matching: Full Matching or Prefix Matching.</p> <p>In Full matching, the entire phone number is entered and then mapped per the Dial Peer rules.</p> <p>In prefix matching, only part of the number is entered followed by T. The mapping will then take place whenever these digits are dialed. Prefix mode supports a maximum of 30 digits.</p>
Destination	Set Destination address. This is for IP direct.
Port	Set the Signaling port, the default is 5060.
Alias	Set the Alias. This is the text to be added, replaced, or deleted. It is optional.
<p>Note: There are four types of aliases.</p> <ol style="list-style-type: none"> 1) All: xxx @ xxx will replace the phone number. 2) Add: xxx @ xxx will be dialed before any phone number. 3) Delete: The characters will be deleted from the phone number. 4) Replace: xxx @ xxx will be substituted for the specified characters. 	
Suffix	Characters to be added at the end of the phone number. This is optional.
Delete Length	Sets the number of characters to be deleted. For example, if this is set to 3, the phone will delete the first 3 digits of the phone number. This is optional.

Security

Browse to the security file to be updated. Click the Update button to update.

Note: The sip TLS file and https file both support “xx.pem” format.

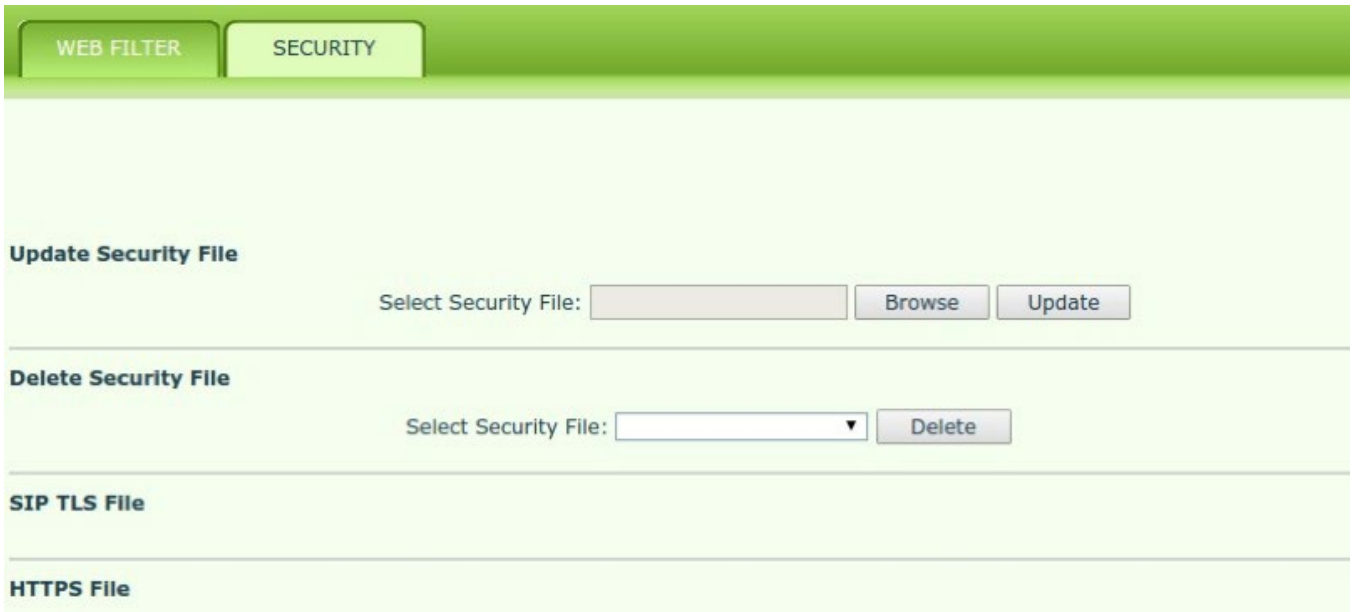

WEB FILTER **SECURITY**

Update Security File

Select Security File:

Delete Security File

Select Security File:

SIP TLS File

HTTPS File



www.denwaip.com