


Digital VoIP Gateways

DW-GTW-AC-E1030

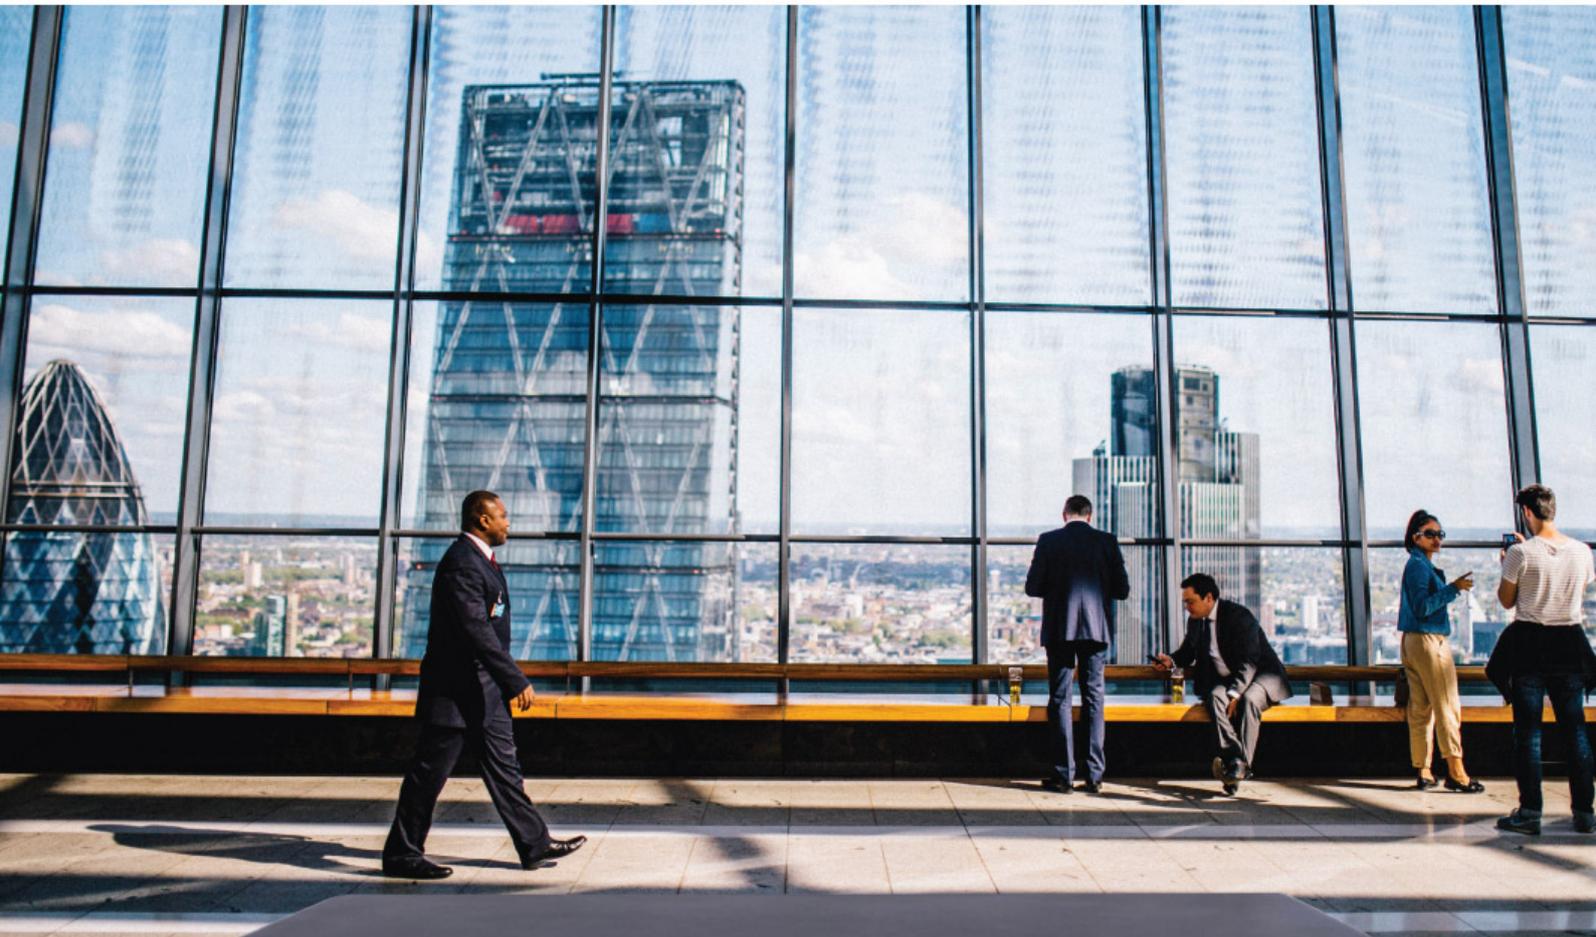

Quick Installation Guide

1 Introduction

This document provides a hardware description of the DW-GTW-AC-E1030 (hereafter referred to as *device*) and step-by-step procedures for mounting and cabling the device.

The device supports the following interfaces:

- Four Gigabit Ethernet (10/100/1000Base-T) LAN ports
- Single E1/T1 port interface over a single copper wire pair (PRI interface is a customer-ordered item)
- Two USB ports for optional, USB storage services
- Serial console port (RJ-45) for device management

2 Package content

Follow the procedure below for unpacking the carton in which the device is shipped.

- DW-GTW-AC-E1030
- Four anti-slide bumpers for desktop installation
- Two mounting brackets for 19-inch rack mounting
- One AC power cable

3 Physical Description

This section provides a physical description of the device.

3.1 Physical Dimensions

The device's physical dimensions and weight are listed in the table below:

Table 3-1: Physical Dimensions

Physical Specification	Value
Dimensions (H x W x D)	4.37 (1U) x 31.0 cm x 21.0 cm (1.72 x 12.2 x 8.3 in.)
Weight	2.0 kg (4.4 lbs.)
Environmental	Operational: 0 to 40°C (32 to 104°F) Storage: -25 to 70°C (-13 to 158°F) Humidity: 10 to 90% non-condensing
MTBF	373,972

3.2 Front Panel Description

This section describes the device's front panel.

3.2.1 Ports and Buttons

The device's front panel is shown in the figure below and described in the subsequent table.

Figure 3-1: Front Panel



Table 3-2: Front Panel Description

Item #	Label	Description
1	POWER / STATUS	LEDs indicating the status of the power and reboot/initialization.
2	//	Reset pinhole button for resetting the device and optionally, for restoring the device to factory defaults. To restore the device to factory defaults, do the following: With a paper clip or any other similar pointed object, press and hold down the pinhole button for at least 12 seconds, but no longer than 25 seconds
3	CONSOLE	RJ-45 port for RS-232 serial communication
4	LAN	Up to four Gigabit Ethernet (10/100/1000Base-T) ports for connecting to LAN network (IP phones, computers, or switches). These ports support half- and full-duplex modes, auto-negotiation, and straight or crossover cable detection.
5	PRI	Single E1/T1 port interface (RJ-48). Note: PRI interface is a customer-ordered item.
6	USB	Two USB 2.0 ports, which can be used, for example, for various storage capabilities using an external USB hard drive or flash disk (disk on key).

3.2.2 LED Descriptions

This section describes the LEDs provided on the front panel.

3.2.3.1 Operational Status LED

The **STATUS** LED indicates the operating status, as described in the table below.

Table 3-3: STATUS LED Description

LED Color	LED State	Description
Green	On	Device is operational.
	Fast Flashing	Initial rebooting stage. Software upgrade (.cmp file) in process (currently supported only by Software Version 6.8).
Red	On	Boot failure.
-	Off	Advanced rebooting stage.

3.2.3.2 LAN Interface LED

Each Ethernet port provides a LED for indicating LAN operating status, as described in the table below.

Table 3-4: LAN LED Description

LED Color	LED State	Description
Green	On	Ethernet link established.
	Flashing	Data is being received or transmitted.
-	Off	No Ethernet link.

3.2.3.3 E1/T1 LEDs

The E1/T1 trunk port provides a LED for indicating operating status, as described in the table below:

Table 3-5: E1/T1 LED Description

Color	State	Description
Green	On	Trunk is synchronized (normal operation).
Red	On	Loss due to any of the following signals: <ul style="list-style-type: none"> • LOS - Loss of Signal • LOF - Loss of Frame • AIS - Alarm Indication Signal (the Blue Alarm) • RAI - Remote Alarm Indication (the Yellow Alarm)
-	Off	Failure / disruption in the AC power supply or the power is currently not being supplied to the device through the AC power supply entry.

3.2.3.4 Power LED

The POWER LED indicates the power supply status, as described in the table below.

Table 3-6: POWER LED Description

LED Color	LED State	Description
Green	On	Power is received by the device.
-	Off	No power received by the device.

3.3 Rear Panel Description

The device's rear panel is shown in the figure below and described in the subsequent table.

Figure 3-2: Rear Panel

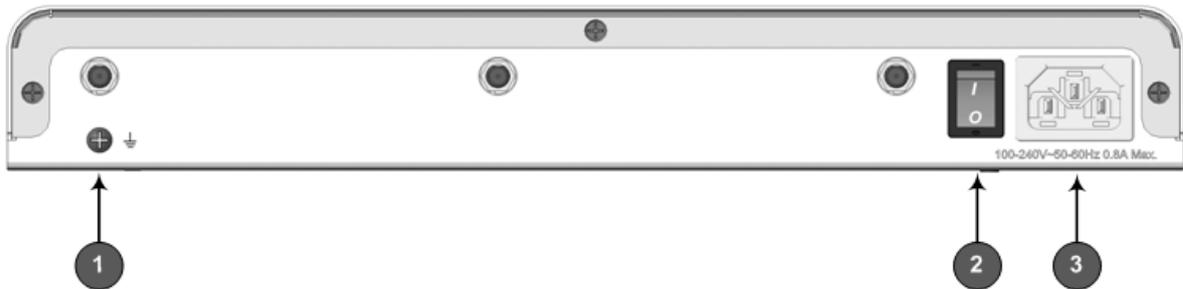


Table 3-7: Real Panel Description

Item #	Label	Description
1		Protective earthing screw.
2	I / O	Power switch (O is off, I is on).
3	100-240V~50-60Hz 0.8A Max.	Three-prong AC power supply entry.

4 Mounting the Device

The device can be mounted in one of the following ways:

Placed on a desktop

Installed in a standard 19-inch rack

Warning: Do not place any equipment directly on top of the device or adjacent to its sides (at least 13-cm separation). In addition, if you are mounting the device in a 19-inch rack, ensure that at least a 3U separation is maintained between the device and other mounted devices or equipment.


4.1 Desktop Mounting

The device can be placed on a desktop when its four anti-slide bumpers (supplied) are attached to the underside of the device.

To attach the anti-slide rubber bumpers to the device:

1. Flip the device over so that its underside faces up.
2. Locate the four anti-slide grooves on the underside - one in each corner.
3. Peel off the adhesive, anti-slide rubber feet and stick one in each anti-slide groove.

Figure 4-1: Location for Applying Rubber Feet

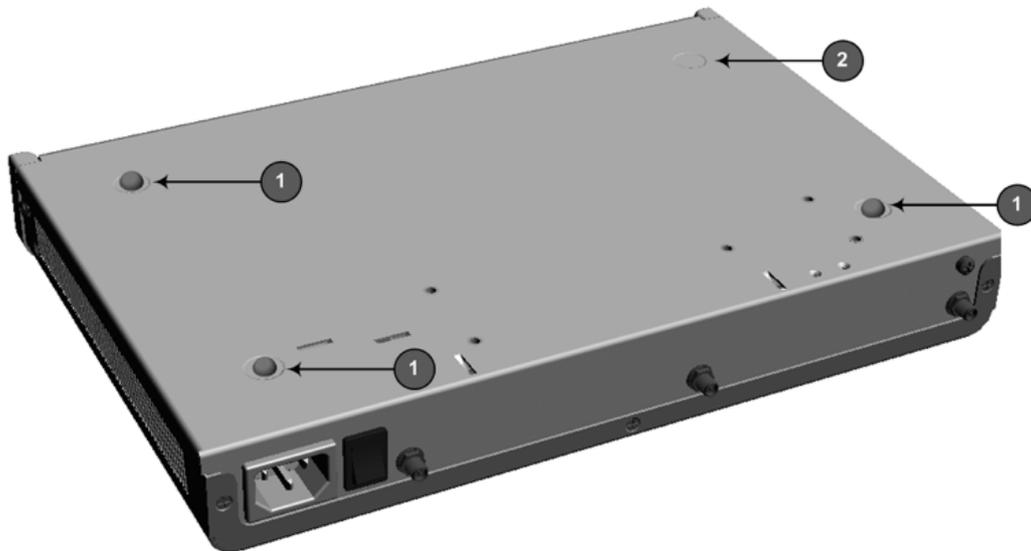

- 1 = Mounted anti-slide rubber feet
- 2 = Anti-slide groove
- 4. Flip the device over again so that it rests on the rubber feet and place it in the required position on a desktop.

4.2 19-Inch Rack Mounting

The device can be installed in a standard 19-inch rack by implementing one of the following mounting methods:

- Placing it on a pre-installed shelf in a 19-inch rack

- Attaching it directly to the rack's frame using the device's mounting brackets (supplied) that need to be attached to the chassis - see Section [4.2.2](#) on page [21](#)

Rack Mount Safety Instructions

When installing the chassis in a rack, implement the following safety instructions:

- **Elevated Operating Ambient Temperature:** If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient temperature. Therefore, consideration should be given to installing the equipment in an environment with maximum ambient temperature (T_{ma}) of 40°C (104°F).
- **Reduced Air Flow:** Installation of the equipment in a rack should be such that the amount of air flow required for safe operation on the equipment is not compromised.
- **Mechanical Loading:** Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
- **Circuit Overloading:** Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over-current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- **Reliable Earthing:** Reliable earthing of rack-mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

4.2.1 Using a Pre-installed Rack Shelf

The procedure below describes how to place the device on a pre-installed shelf in a 19-inch rack.

To mount the device on a pre-installed shelf in the rack:

1. Before installing it in the rack, ensure that you have a pre-installed rack shelf on which the device can be placed.
2. Place the device on the pre-installed shelf in the rack.

4.2.2 Using Mounting Brackets

The procedure below describes how to mount the device in a 19-inch rack. Rack mounting involves placing the device on a pre-installed rack shelf and then attaching the device's mounting brackets to the device and rack frame. The purpose of the mounting brackets is to secure the device to the rack. Two mounting brackets are provided:


- Left mounting bracket:

Figure 4-2: Left Mounting Bracket



- Right mounting bracket with hole for looping through an optional cable tie (not supplied) for securing cables:

Figure 4-3: Right Mounting Bracket

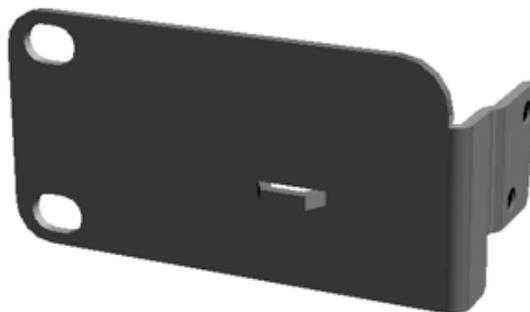

To mount the device in a 19-inch rack using mounting brackets:

1. Attach the two mounting brackets (supplied) to each side of the device's chassis, using the supplied screws, as shown in the figure below:

Figure 4-4: Attaching the Mounting Brackets



- 1 = Left mounting bracket
 - 2 = Attached screws
 - 3 = Right mounting bracket
1. Place the device on a pre-installed shelf in the rack.
 2. Attach the ends of the mounting brackets (that you installed in Step 1) to the vertical track of the rack's frame, using standard 19-inch rack bolts (not supplied).

5 Cabling the Device

This section describes the cabling of the device, which includes the following:

- Grounding (earthing) the device
- Connecting to the LAN
- Connecting to an E1/T1 trunk
- Connecting to a computer for serial communication
- Connecting a USB storage device
- Connecting to the power supply

5.1 Grounding the Device

The device must be connected to earth (grounded) using an equipment-earthing conductor.

Protective Earthing

The equipment is classified as Class I EN60950 and UL60950 and must be earthed at all times.

For Finland: "Laitte on lilitettava suojamaadoituskoskettimilla varustettuun pistorasiaan."


For Norway: "Apparatet rna tilkoples jordet stikkontakt."

For Sweden: "Apparaten skall anslutas till jordat uttag."

To earth the device:

1. Connect an electrically earthed strap of 16 AWG wire (minimum) to the chassis' earthing screw (located on the rear panel), using the supplied washer.
2. Connect the other end of the strap to a protective earthing. This should be in accordance with the regulations enforced in the country of installation.

Figure 5-1: Earthing the Device

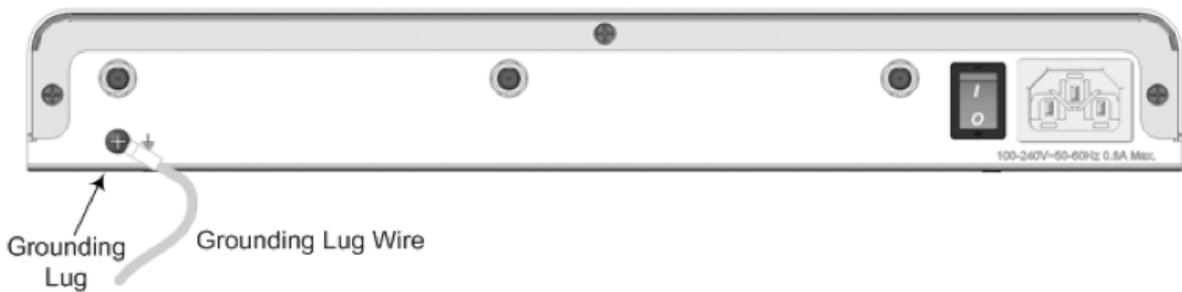

5.2 Connecting to the LAN

The device provides up to four Gigabit Ethernet (10/100/1000Base-T) ports for connection to the LAN (e.g., computers, switches, and IP phones). These ports support half- and full-duplex modes, auto-negotiation, and straight or crossover cable detection.

The RJ-45 connector pinouts are described in the table below:

Table 5-1: RJ-45 Connector Pinouts for GbE


Pin	Signal Name
1	Ethernet signal pair (10/100/1000Base-T)
2	
3	Ethernet signal pair (10/100/1000Base-T)
6	
4	Ethernet signal pair (1000Base-T)
5	
7	Ethernet signal pair (1000Base-T)
8	

Shield	Chassis ground
--------	----------------

To connect the device to the LAN:

1. Connect one end of a straight-through RJ-45 Cat 5e or Cat 6 cable to the RJ-45 port labeled S1 / LAN GE.

Figure 5-2: Cabling the LAN Ports

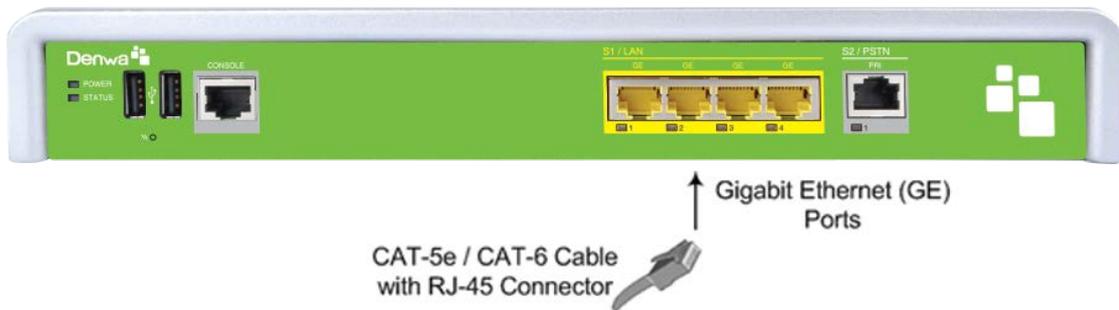

2. Connect the other end of the cable to the Gigabit Ethernet network.

5.3 Connecting to an ISDN PRI (E1/T1) Trunk

The procedure below describes the cabling of the device's E1/T1 (PRI) trunk interface.

Warning: To protect against electrical shock and fire, use a 26 AWG min wire to connect the E1 / T1 port to the PSTN.

Note: PRI interface is a customer-ordered item.

The RJ-48c trunk connector used in the cabling is wired according to the figure below:

Figure 5-3: RJ-48c Connector Pinouts for E1/T1

Ø To connect the E1/T1 trunk interface:

1. Connect the E1/T1 trunk cable to the device's E1/T1 port.
2. Connect the other end of the trunk cable to your PBX/PSTN switch.

Figure 5-4: Cabling E1/T1 Port

5.4 Connecting the Serial Interface to a PC

The device provides an RS-232 serial interface port on its front panel. The serial cable adapter used for connecting the RS-232 interface is shown below:

Figure 5-5: RS-232 Cable Adapter

Table 5-2: DB-9 to RJ-45 Serial Cable Connector Pinouts

DB-9 Female	RJ-45
8	1
6	2
2	3
5	4
5	5
3	6
4	7
7	8

To connect the device's serial interface port to a PC:

1. Connect the end of the cable providing the RJ-45 connector to the device's serial port located on the front panel, labeled **CONSOLE**.

Figure 5-6: Cabling Serial Port

2. Connect the other end of the cable providing the 9-pin DB connector to the COM RS-232 communication port on your computer.

5.5 Connecting a USB Storage Device

The device supports USB storage capabilities, using an external USB hard drive or flash disk (disk on key) connected to the device's USB port. The storage capabilities are configured through CLI and include the following:

- Saving network captures to the USB
- Updating the device's firmware from the USB
- Updating the device's configuration from the USB
- Saving the current configuration to the USB

To connect the USB storage device:

- Connect the USB storage device to one of the USB ports located on the front panel.

Figure 5-7: Connecting a USB Storage Device



Note: Only a single USB storage (formatted to FAT/FAT32) operation is supported at any given time.

5.6 Connecting to the Power Supply

The device receives power from a standard alternating current (AC) electrical outlet. The connection is made using the supplied AC power cord.

Table 5-3: Power Specifications

Physical Specification	Value
Input Voltage	Single universal AC power supply 100 to 240V
AC Input Frequency	50 to 60 Hz
AC Input Current	0.8A
Max. Power Consumption	20W

Warnings:

- The device must be connected to a socket-outlet providing a protective earthing connection.
- Use only the AC power cord that is supplied with the device.

To connect the device to the power supply:

1. Connect the line socket of the AC power cord (supplied) to the device's AC power socket (labeled 100-240V~50-60 Hz 0.8A), located on the rear panel.

Figure 5-8: Connecting to the Power Supply



2. Connect the plug at the other end of the AC power cord to a standard electrical outlet.
3. Press the power switch to on (I) position so that the device receives power; the POWER LED on the front panel is lit green.